

tions being customized. Contact your Toyota dealer for further details.

- A** Settings that can be changed using the multimedia display
- B** Settings that can be changed using the multi-information display
- C** Settings that can be changed by your Toyota dealer

Definition of symbols: O = Available, — = Not available

■ **Gauges, meters and multi-information display (with 7-inch display) (→P.89, 96)**

Function*1	Default setting	Customized setting	<b>A</b>	<b>B</b>	<b>C</b>
Language*2	English	French	O	O	—
		Spanish			
Units*3	km (km/L)	km (L/100 km)	—	O	—
		miles (MPG Imperial)			
		miles (MPG)			
Meter Style*2	“Smart”	“Tough”	—	O	—
		“Sporty”			
Dial Type*2	Tachometer	Speedometer	—	O	—
		Simple (non-dial)			
Fuel Economy	The average fuel economy after starting	The average fuel economy since the function was reset	—	O	—
		The average fuel economy after refuel			
Audio system linked display*2	On	Off	—	O	—
Traction monitor display*2	On	Off	—	O	—
Drive information items (first item)*2	Distance	Average Speed	—	O	—
		Total Time			

Function <sup>*1</sup>	Default setting	Customized setting	A	B	C
Drive information items (second item) <sup>*2</sup>	Total Time	Average Speed	—	O	—
		Distance	—	O	—
TRIP A Items (first item) <sup>*2</sup>	Distance	Average Speed	—	O	—
		Total Time	—	O	—
TRIP A Items (second item) <sup>*2</sup>	Total Time	Average Speed	—	O	—
		Distance	—	O	—
TRIP B Items (first item) <sup>*2</sup>	Distance	Average Speed	—	O	—
		Total Time	—	O	—
TRIP B Items (second item) <sup>*2</sup>	Total Time	Average Speed	—	O	—
		Distance	—	O	—
Pop-up display <sup>*2</sup>	On	Off	—	O	—
Suggestion function <sup>*2</sup>	On	On (when the vehicle is stopped)	O	—	O
		Off	—	—	—
Stop light indicator	On	Off	—	O	—




<sup>\*1</sup>: For details about each function: →P.101

<sup>\*2</sup>: The default setting is changed in conjunction with the settings of My Settings.

<sup>\*3</sup>: The default setting varies according to country.

### ■ Gauges, meters and multi-information display (with 12.3-inch display) (→P.92, 106)

Function <sup>*1</sup>	Default setting	Customized setting	A	B	C
Language <sup>*2</sup>	English	French	O	O	—
		Spanish	—	—	—
Units <sup>*3</sup>	km (km/L)	km (L/100 km)	—	O	—
		miles (MPG Imperial)	—	O	—
		miles (MPG)	—	O	—

Function <sup>*1</sup>	Default setting	Customized setting	A	B	C
Meter Type <sup>*2</sup>		<div><sup>*4</sup></div> <div><sup>*4</sup></div>	—	O	—
Meter Style <sup>*2</sup>	“Smart”	“Casual” “Tough” “Sporty”	—	O	—
Dial Type <sup>*2</sup>	Tachometer	Speedometer <sup>*5</sup>	—	O	—
Fuel Economy	The average fuel economy after starting	The average fuel economy since the function was reset	—	O	—
Drive information items (first item) <sup>*2</sup>	Distance	Average Speed Total Time	—	O	—
Drive information items (second item) <sup>*2</sup>	Total Time	Average Speed Distance	—	O	—
TRIP A Items (first item) <sup>*2</sup>	Distance	Average Speed Total Time	—	O	—
TRIP A Items (second item) <sup>*2</sup>	Total Time	Average Speed Distance	—	O	—
TRIP B Items (first item) <sup>*2</sup>	Distance	Average Speed Total Time	—	O	—
TRIP B Items (second item) <sup>*2</sup>	Total Time	Average Speed Distance	—	O	—
Pop-up display <sup>*2</sup>	On	Off	—	O	—
Suggestion function <sup>*2</sup>	On	On (when the vehicle is stopped) Off	O	—	O
Stop light indicator	On	Off	—	O	—

<sup>\*1</sup>: For details about each function: →P.112

<sup>\*2</sup>: The default setting is changed in conjunction with the settings of My Set-

tings.

\*3: The default setting varies according to country.

\*4: The on/off operation of the widget can be changed.

\*5: The setting items may not be displayed depending on the meter type

### ■ Head-up Display<sup>\*1</sup> (→P.117)

Function	Default setting	Customized setting	A	B	C
Head-up display <sup>*2</sup>	On	Off	—	O	—
Head-up display type <sup>*2</sup>	Standard	Full	—	O	—
		Minimum	—	O	—
Head-up display brightness <sup>*2</sup>	Standard	Desired brightness	—	O	—
Head-up display location <sup>*2</sup>	Standard	Desired location	—	O	—
Head-up display angle adjustment <sup>*2</sup>	Standard	Desired angle	—	O	—

\*1: If equipped

\*2: The default setting is changed in conjunction with the settings of My Settings.

### ■ Door lock (→P.131, 620)

Function	Default setting	Customized setting	A	B	C
Unlocking using a mechanical key	Driver's door unlocked in one step, all doors unlocked in two step	All doors unlocked in one step	—	—	O
Automatic door locking function <sup>*</sup>	Shift position linked door locking operation	Off	O	—	O
		Speed linked door locking operation			

Function	Default setting	Customized setting	A	B	C
Automatic door unlocking function*	Shift position linked door unlocking operation	Off	O	—	O
		Driver's door linked door unlocking operation			

\* : The default setting is changed in conjunction with the settings of My Settings.

■ Rear seat reminder (→P.133)

Function	Default setting	Customized setting	A	B	C
Rear seat reminder function*	On	Off	—	O	—

\* : The default setting is changed in conjunction with the settings of My Settings.

■ Smart key system and wireless remote control (→P.128, 152)


Function	Default setting	Customized setting	A	B	C
Operating signal (Buzzers)*	Standard	Desired volume	O	—	O
Operation signal (Emergency flashers)*	On	Off	O	—	O
Time elapsed before automatic door lock function is activated if door is not opened after being unlocked*	60 seconds	Off	O	—	O
		30 seconds			
		120 seconds			
Open door warning buzzer (When locking the vehicle)	On	Off	—	—	O

\* : The default setting is changed in conjunction with the settings of My Settings.

### ■ Smart key system (→P.152)

Function	Default setting	Customized setting	A	B	C
Smart access system with push-button start	On	Off	—	—	O
Smart door unlocking	Driver's door	All the doors	O	—	O
Time elapsed before unlocking all the door when gripping and holding the driver's door handle	2 seconds	Off	—	—	O
		1.5 seconds			
		2.5 seconds			
Number of consecutive door lock operations	2 times	As many as desired	—	—	O
Power switch illumination	On	Off	—	—	O


### ■ Wireless remote control (→P.128)

Function	Default setting	Customized setting	A	B	C
Unlocking operation *1	Driver's door unlocked in one step, all doors unlocked in two step	All doors unlocked in one step	O	—	O
Locking operation when door opened *1	On	Off	O	—	O
The function that activates the  switch of the wireless remote control when locking the door (→P.140)*2	On (Unlocking all the door)	On (Unlocking back door only)	—	—	O
		Off			
Theft deterrent panic mode	On	Off	—	—	O

\*1: The default setting is changed in conjunction with the settings of My Settings.

\*2: If equipped

### ■ Power back door\*<sup>1</sup> (→P.140)

Function	Default setting	Customized setting	A	B	C
Power back door operations	On	Off	—	O	—
Power back door switch operations	Press and hold	One short press	—	—	O
 switch of the wireless remote control operation	Press and hold	One short press	—	—	O
		Push twice			
		Off			
Operation buzzer volume	Level 3	Level 1	—	O	—
		Level 2			
Operation buzzer while the back door is operating* <sup>2</sup>	Off	On	—	—	O
Opening angle	5	1 to 4	—	O	—
		User setting* <sup>3</sup>			
Automatic closing of the back door when lowered	On	Off	—	—	O
Close & lock (Walk-Away) function	Off	On	—	—	O

\*<sup>1</sup>: If equipped

\*<sup>2</sup>: The operation buzzer that sounds when the back door begins to operate cannot be turned off.

\*<sup>3</sup>: The open position is set by the power back door switch. (→P.148)

### ■ Driving position memory\* (→P.189)

Function	Default setting	Customized setting	A	B	C
Function to prevent contact between the head restraint and ceiling (while moving to memory location)	On	Off	—	—	O

\*: If equipped

### ■ Enabling easier driver entry and exit (power easy access system) \*1 (→P.189)

Function	Default setting	Customized setting	A	B	C
Driver's seat slide movement when exiting the vehicle*2	Full	Off	O	—	O
		Partial			
Steering wheel movement*2	Tilt only	Off	O	—	—
		Telescopic only			
		Tilt and telescopic			

\*1: If equipped

\*2: The default setting is changed in conjunction with the settings of My Settings.

### ■ Outside rear view mirrors (→P.179)

Function	Default setting	Customized setting	A	B	C
Automatic mirror folding and extending operation	Linked to the locking/ unlocking of the doors	Off	—	—	O
		Linked to operation of the power switch			

### ■ Power windows and moon roof\* (→P.183, 186)

Function	Default setting	Customized setting	A	B	C
Mechanical key linked operation	Off	On	—	—	O
Wireless remote control linked operation (open)	Off	On	—	—	O
Wireless remote control linked operation signal (buzzer)	On	Off	—	—	O

\*: If equipped

### ■ Moon roof\* (→P.186)

Function	Default setting	Customized setting	A	B	C
Linked operation of components when mechanical key is used	Slide only	Tilt only	—	—	O
Linked operation of components when wireless remote control is used	Slide only	Tilt only	—	—	O

\*: If equipped

### ■ Power switch (→P.227)

Function	Customized setting	A	B	C
ACC customization Enabling/Disabling ACC mode	On/Off	O	—	O

### ■ Automatic light control system (→P.242)

Function	Default setting	Customized setting	A	B	C
Daytime Running Lights <sup>*1, 2</sup>	On	Off	O	—	O
Light sensor sensitivity <sup>*1</sup>	Normal	Brighter	O	—	O
		Bright			
		Dark			
		Darker			
Time elapsed before headlights automatically turn off after doors are closed <sup>*1</sup>	30 seconds	Off	O	—	O
		60 seconds			
		90 seconds			
Windshield wiper linked headlight illumination	On	Off	—	—	O

<sup>\*1</sup>: The default setting is changed in conjunction with the settings of My Settings.

<sup>\*2</sup>: Except for Canada

### ■ Lights (→P.242)

Function	Default setting	Customized setting	A	B	C
Welcome lamp	On	Off	—	—	O

### ■ Pre-Collision System (→P.270)

Function	Customized setting	A	B	C
Pre-Collision System	On/Off	—	O	—
Warning timing*	Later/Default/Earlier	—	O	—

\*: The default setting is changed in conjunction with the settings of My Settings.

### ■ Front Cross Traffic Alert\*<sup>1</sup> (→P.302)

Function	Customized setting	A	B	C
Front Cross Traffic Alert	On/Off	—	O	—
Alert timing* <sup>2</sup>	Later/Default/Earlier	—	O	—

\*<sup>1</sup>: If equipped

\*<sup>2</sup>: The default setting is changed in conjunction with the settings of My Settings.

### ■ Lane Departure Alert system (→P.290)

Function	Customized setting	A	B	C
Lane Departure Alert system*	On/Off	—	O	—
Alert timing*	Default/Earlier	—	O	—
Alert options*	Vibration/Audible	—	O	—

\*: The default setting is changed in conjunction with the settings of My Settings.

### ■ Lane Change Assist\*<sup>1</sup> (→P.287)

Function	Customized setting	A	B	C
Lane Change Assist* <sup>2</sup>	On/Off	—	O	—

\*<sup>1</sup>: If equipped

\*<sup>2</sup>: The default setting is changed in conjunction with the settings of My Set-

tings.

■ **Dynamic Radar Cruise Control (→P.307)**

Function	Customized setting	A	B	C
Acceleration setting*	High/Mid/Low	—	O	—
Guide message*	On/Off	—	O	—
Curve speed reduction*	High/Mid/Low/Off	—	O	—

\*: The default setting is changed in conjunction with the settings of My Settings.

■ **Proactive Driving Assist (→P.296)**

Function	Customized setting	A	B	C
Proactive Driving Assist (PDA)*	On/Off	—	O	—
Support sensitivity*	Low/Mid/High	—	O	—
Steering Assist (SA)*	On/Off	—	O	—
Deceleration Assist (DA)*	On/Off	—	O	—
Obstacle Anticipation Assist (OAA)*	On/Off	—	O	—

\*: The default setting is changed in conjunction with the settings of My Settings.

■ **Road Sign Assist\*<sup>1</sup> (→P.304)**

Function	Customized setting	A	B	C
Road Sign Assist* <sup>2</sup>	On/Off	—	O	—
Excess speed notification method* <sup>2</sup>	None/Visual/Visual & Audible	—	O	—
Other notifications method* <sup>2</sup>	None/Visual/Visual & Audible	—	O	—
Excess speed notification level* <sup>2</sup>	5 mph (10 km/h) / 3 mph (5 km/h) / 1 mph (2 km/h)	—	O	—

\*<sup>1</sup>: If equipped

\*<sup>2</sup>: The default setting is changed in conjunction with the settings of My Settings.

### ■ Driver break suggestion (→P.293)

Function	Customized setting	A	B	C
Driver break suggestion	On/Off	—	O	—

### ■ Traffic Jam Assist<sup>\*1</sup> (→P.324)

Function	Customized setting	A	B	C
Traffic Jam Assist <sup>*2</sup>	On/Off	—	O	—
Driver Monitor Camera Recording <sup>*2</sup>	On/Off	—	O	—

<sup>\*1</sup>: If equipped

<sup>\*2</sup>: This setting changes in accordance with My Settings.

### ■ Driver monitor<sup>\*1</sup> (→P.268)

Function	Customized setting	A	B	C
Warning function <sup>*2</sup>	On/Off	—	O	—

<sup>\*1</sup>: If equipped

<sup>\*2</sup>: The default setting is changed in conjunction with the settings of My Settings.

### ■ BSM (Blind Spot Monitor) (→P.330)

Function	Customized setting	A	B	C
BSM (Blind Spot Monitor)	On/Off	—	O	—
Outside rear view mirror indicator brightness <sup>*</sup>	Dim/Bright	—	O	—
Alert timing for presence of approaching vehicle (sensitivity) <sup>*</sup>	Late/Intermediate/Early	—	O	—
Buzzer warning <sup>*</sup>	On/Off	—	O	—

<sup>\*</sup>: The default setting is changed in conjunction with the settings of My Settings.

### ■ Safe Exit Assist (→P.335)

Function	Customized setting	A	B	C
Safe Exit Assist	On/Off	—	O	—
Outside rear view mirrors display*	On/Off	—	O	—
Detection sensitivity*	Low/Mid/High	—	O	—

\*: The default setting is changed in conjunction with the settings of My Settings.

### ■ Intuitive parking assist (→P.339)

Function	Customized setting	A	B	C
Intuitive parking assist	On/Off	—	O	—
Buzzer volume of intuitive parking assist when operating <sup>*1, 2</sup>	Level1 / Level2 / Level3	—	O	—

<sup>\*1</sup>: The default setting is changed in conjunction with the settings of My Settings.

<sup>\*2</sup>: The sound volume is linked among the buzzer volume of the intuitive parking assist, RCTA, and RCD<sup>\*3</sup>.

<sup>\*3</sup>: If equipped

### ■ RCTA (Rear Cross Traffic Alert) function (→P.345)

Function	Customized setting	A	B	C
RCTA (Rear Cross Traffic Alert) function	On/Off	—	O	—
Buzzer volume of RCTA when operating <sup>*1, 2</sup>	Level1/Level2/Level3	—	O	—

<sup>\*1</sup>: The default setting is changed in conjunction with the settings of My Settings.

<sup>\*2</sup>: This setting is linked with the buzzer volume of the intuitive parking assist, RCTA, and RCD<sup>\*3</sup>.

<sup>\*3</sup>: If equipped

### ■ RCD (Rear Camera Detection) function\* (→P.351)

Function	Customized setting	A	B	C
RCD (Rear Camera Detection) function	On/Off	—	O	—

\*: If equipped

### ■ Multi-terrain Monitor\*<sup>1</sup> (→P.415)

Function	Default setting	Customized setting	A	B	C
Cornering View* <sup>2</sup>	On	Off	O	—	—
View Under Vehicle* <sup>2</sup>	On	Off	O	—	—
TOYOTA Park Assist 3D Display* <sup>2</sup>	On	Off	O	—	—
Front side of TOYOTA Park Assist Distance* <sup>2</sup>	Near	Off	O	—	—
Rear side of TOYOTA Park Assist Distance* <sup>2</sup>	Near	Off	O	—	—
Vehicle Body Color* <sup>2</sup>	Color 1	Color 2 to 5	O	—	—

\*<sup>1</sup>: If equipped

\*<sup>2</sup>: The default setting is changed in conjunction with the settings of My Settings.

### ■ Automatic air conditioning system (→P.470)

Function	Default setting	Customized setting	A	B	C
Switching between outside air and recirculated air mode linked to "AUTO" switch operation*	On	Off	O	—	O
A/C auto switch operation*	On	Off	O	—	O

\*: The default setting is changed in conjunction with the settings of My Settings.

## ■ Illumination (→P.485)

Function	Default setting	Customized setting	A	B	C
Time elapsed before the interior lights turn off* <sup>1</sup>	15 seconds	Off	O	—	O
		7.5 seconds			
		30 seconds			
Operation after the power switch is turned off	On	Off	—	—	O
Operation when you approach the vehicle with the electronic key on your person	On	Off	—	—	O
Operation when the doors are unlocked	On	Off	—	—	O
All zones: brightness of the inside door handle lights* <sup>2</sup> , pull handle lights* <sup>2</sup> , shift lever lights and footwell lights* <sup>2</sup> , etc* <sup>1, 2</sup>	Standard	Desired brightness	O	—	O
Lighting of footwell lights* <sup>2</sup>	On	Off	—	—	O
Lighting of front inside door handle lights* <sup>2</sup> , front pull handle lights* <sup>2</sup> and shift lever lights	On	Off	—	—	O
Lighting of rear inside door handle lights* <sup>2</sup> and rear pull handle lights* <sup>2</sup>	On	Off	—	—	O
Time elapsed before the outer foot lights* <sup>2</sup> and running board lights* <sup>2</sup> turn off* <sup>1</sup>	15 seconds	Off	O	—	O
		7.5 seconds			
		30 seconds			
Operation of the outer foot lights* <sup>2</sup> and running board lights* <sup>2</sup> when you approach the vehicle with the electronic key on your person	On	Off	—	—	O

Function	Default setting	Customized setting	A	B	C
Operation of the outer foot lights <sup>*2</sup> and running board lights <sup>*2</sup> when the doors are unlocked	On	Off	—	—	O
Operation of the outer foot lights <sup>*2</sup> and running board lights <sup>*2</sup> when a door is opened	On	Off	—	—	O

<sup>\*1</sup>: The default setting is changed in conjunction with the settings of My Settings.

<sup>\*2</sup>: If equipped

### ■ Vehicle customization

- When the smart key system is off, the entry unlock function cannot be customized.
- When the doors remain closed after unlocking the doors and the timer activated automatic door lock function activates, signals will be generated in accordance with the operation buzzer volume and operational signal (Emergency flashers) function settings.
- Some settings can be changed using a switch or the multimedia display. If a setting is changed using a switch, the changed setting will not be reflected on the multimedia display. Until the power switch is turned off and then turned back to ON.

Items to initialize

The following items must be initialized for normal system operation after such cases as the 12-volt battery being reconnected, or maintenance being performed on the vehicle:

List of the items to initialize

Item	When to initialize	Reference
Tire pressure warning system	<ul style="list-style-type: none"><li>• When rotating the tires</li><li>• When the tire inflation pressure is changed by changing tire size. (When there are multiple specified pressures)</li><li>• After registering the ID codes</li></ul>	P.556
Message indicating maintenance is required	<ul style="list-style-type: none"><li>• After the maintenance is performed</li></ul>	P.536
Oil maintenance	<ul style="list-style-type: none"><li>• After the maintenance is performed</li></ul>	P.546
Power back door*	<ul style="list-style-type: none"><li>• After reconnecting or changing the 12-volt battery</li></ul>	P.144
Power window	<ul style="list-style-type: none"><li>• When functioning abnormally</li></ul>	P.183
Moon roof*		P.187

\* : If equipped