


Last Modified: 07-05-2024	6.11:8.1.0	Doc ID: RM100000002K76E
Model Year Start: 2024	Model: Land Cruiser	Prod Date Range: [02/2024 -]
Title: HEATING / AIR CONDITIONING: REAR AIR CONDITIONING UNIT: DISASSEMBLY; 2024 MY Land Cruiser [02/2024 -]		

DISASSEMBLY

CAUTION / NOTICE / HINT


COMPONENTS (DISASSEMBLY)

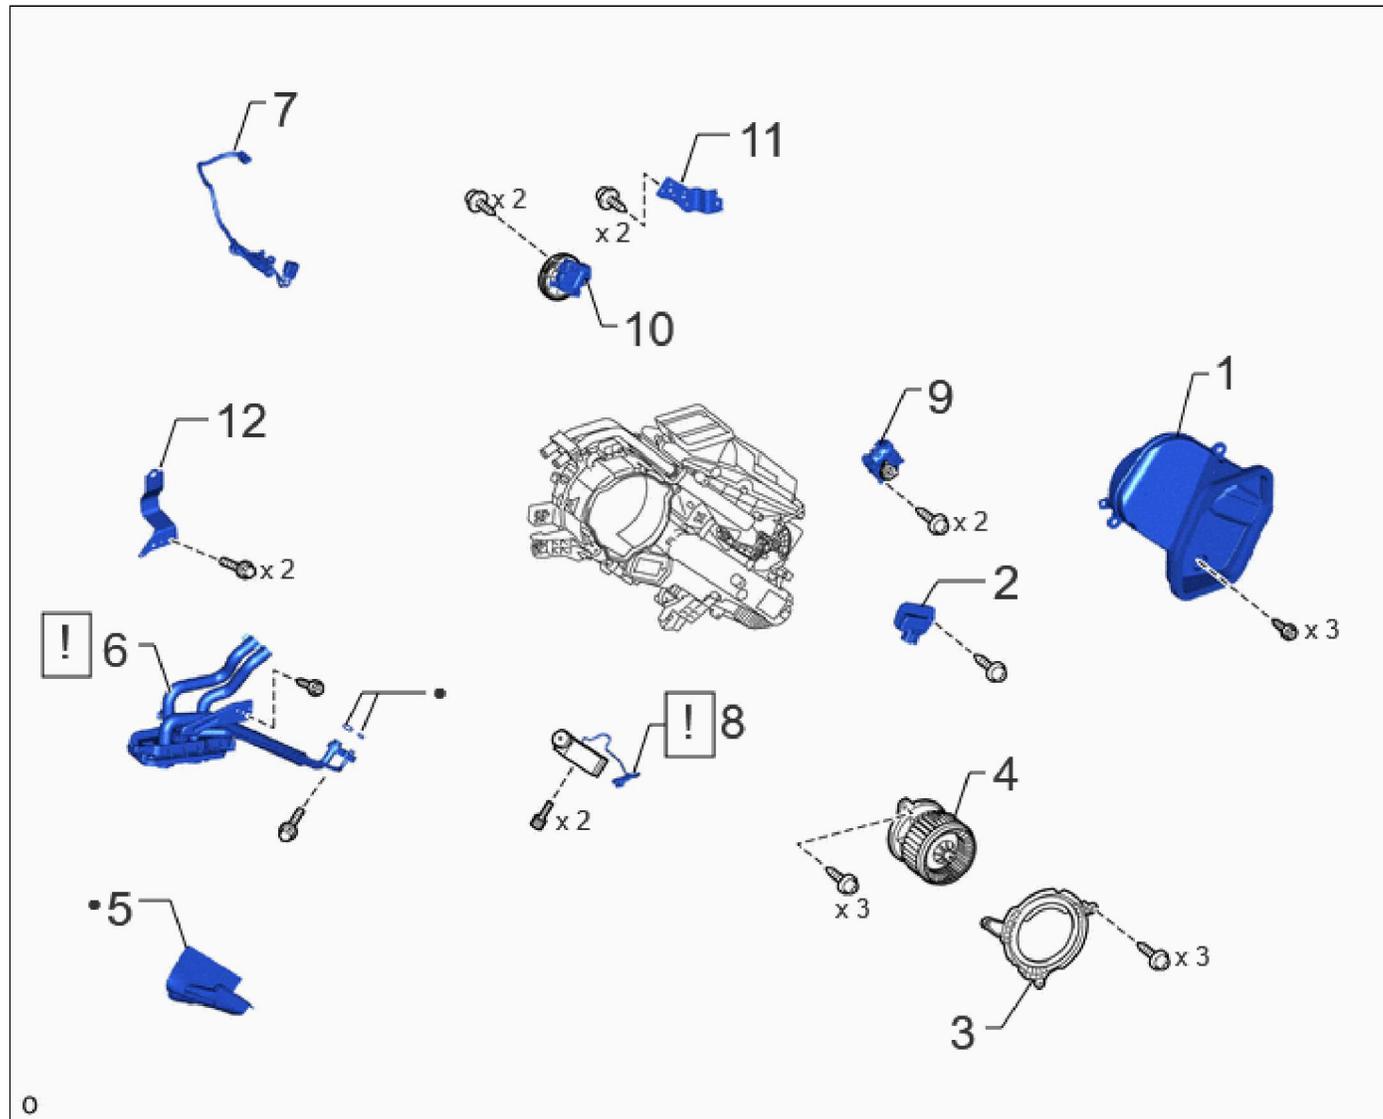

PROCEDURE		PART NAME CODE	!	✂	⚙
1	REAR NO. 7 AIR DUCT	87212L	-	-	-
2	BLOWER MOTOR CONTROL	87165C	-	-	-

PROCEDURE		PART NAME CODE			
3	HEATER BLOWER COVER	87236C	-	-	-
4	REAR BLOWER MOTOR WITH FAN SUB-ASSEMBLY	87103D	-	-	-
5	NO. 1 COOLING UNIT PACKING	88578B	-	-	-
6	AIR CONDITIONING TUBE AND ACCESSORY ASSEMBLY	88710H	WFO	-	-
7	NO. 1 COOLER WIRING HARNESS SUB-ASSEMBLY	88605	-	-	-
8	REAR COOLING UNIT EXPANSION VALVE	88515B	WFO	-	-
9	REAR AIR MIX DAMPER SERVO SUB-ASSEMBLY	87106W	-	-	-
10	REAR MODE DAMPER SERVO SUB-ASSEMBLY	87106X	-	-	-
11	REAR NO. 1 AIR CONDITIONING UNIT BRACKET	88F88G	-	-	-
12	BRACKET	88688Z	-	-	-

•	Non-reusable part	-	-
---	-------------------	---	---

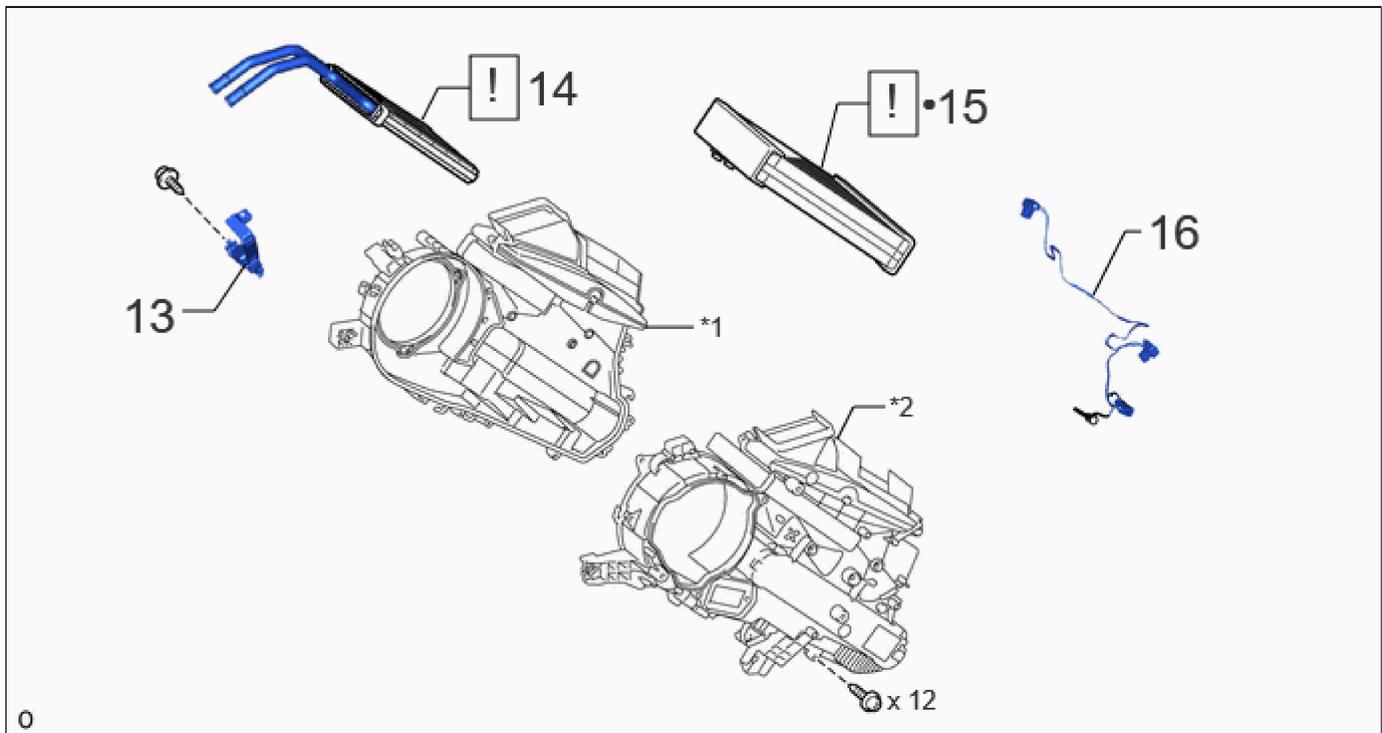


PROCEDURE		PART NAME CODE			
13	HEATER RADIATOR UNIT SUB-ASSEMBLY	87107B	WFO	-	-
14	HEATER CLAMP	-	-	-	-
15	EVAPORATOR SUB-ASSEMBLY (REAR)	88501R	WFO	-	-

PROCEDURE		PART NAME CODE			
16	NO. 2 COOLER WIRING HARNESS SUB-ASSEMBLY	88605C	-	-	-


*1	COOLING UNIT CASE LH	*2	COOLING UNIT CASE RH
•	Non-reusable part	-	-

PROCEDURE


1. REMOVE REAR NO. 7 AIR DUCT

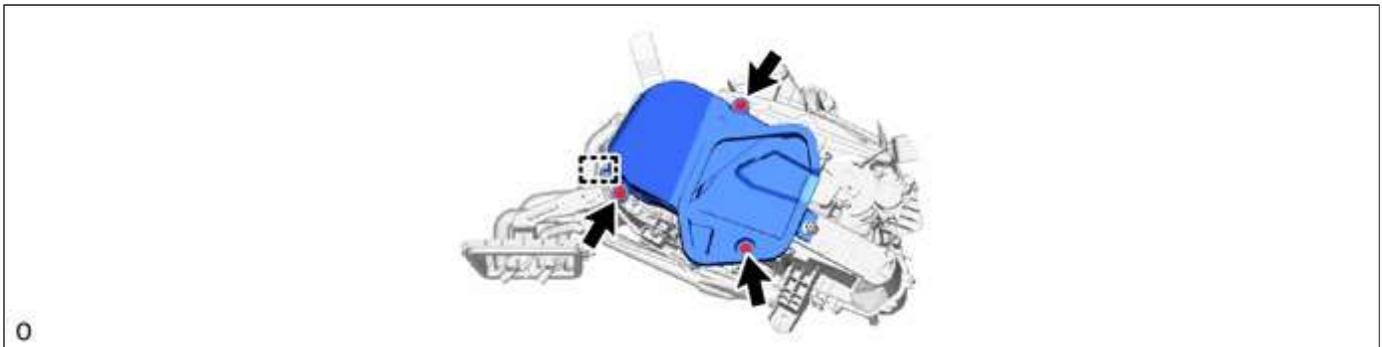


2. REMOVE BLOWER MOTOR CONTROL

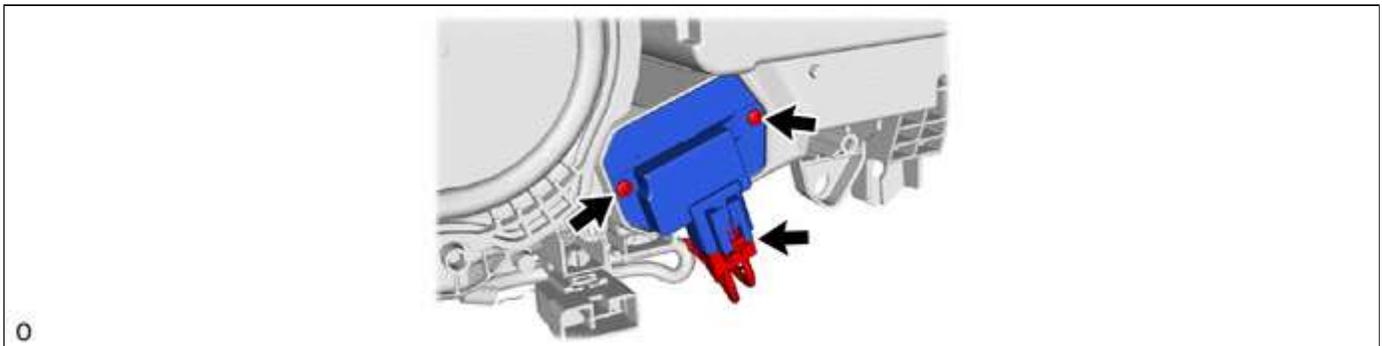


3. REMOVE HEATER BLOWER COVER

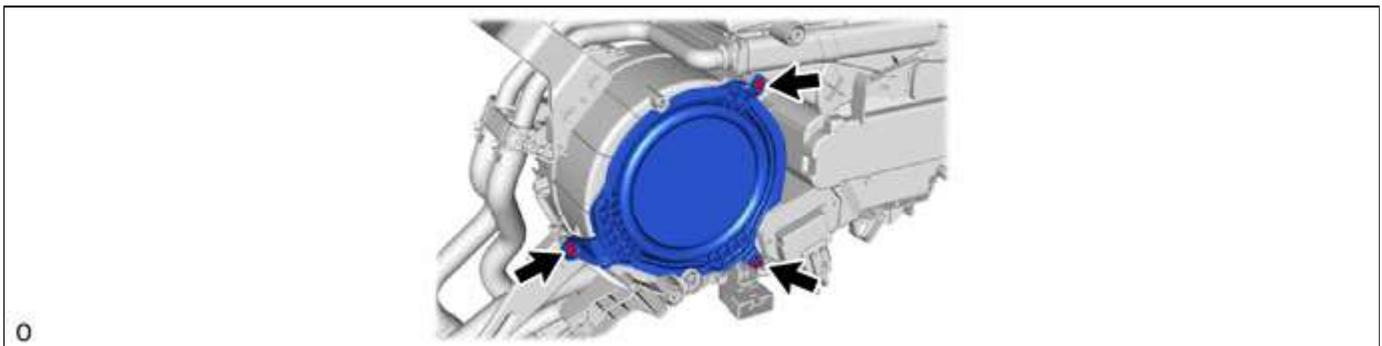


4. REMOVE REAR BLOWER MOTOR WITH FAN SUB-ASSEMBLY

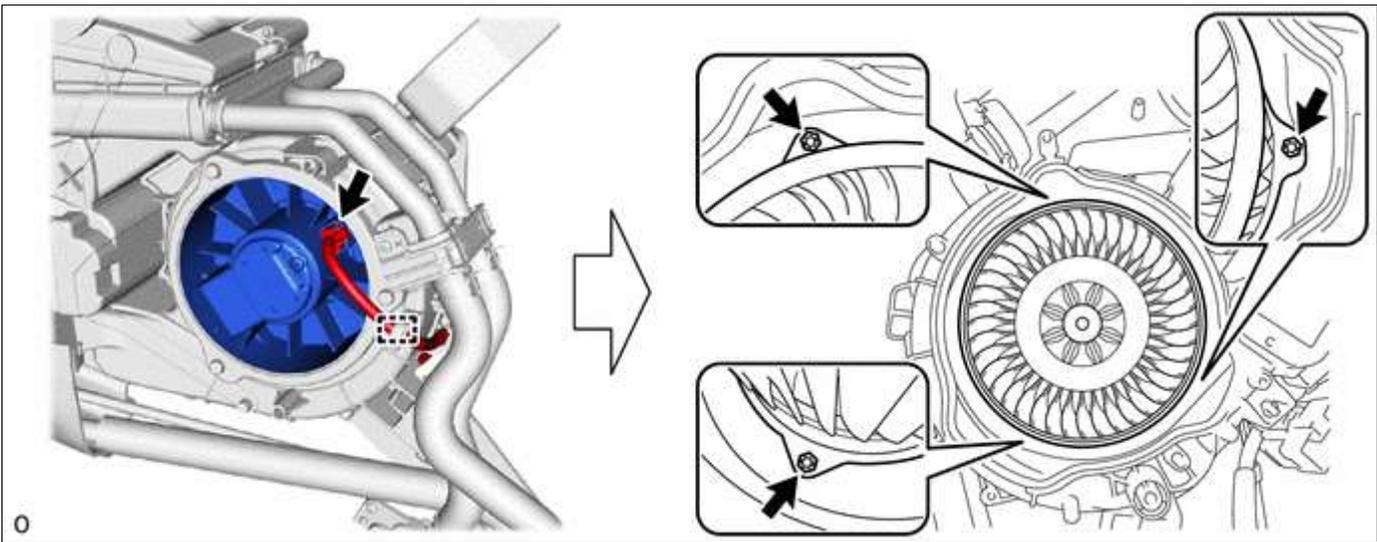

5. REMOVE NO. 1 COOLING UNIT PACKING

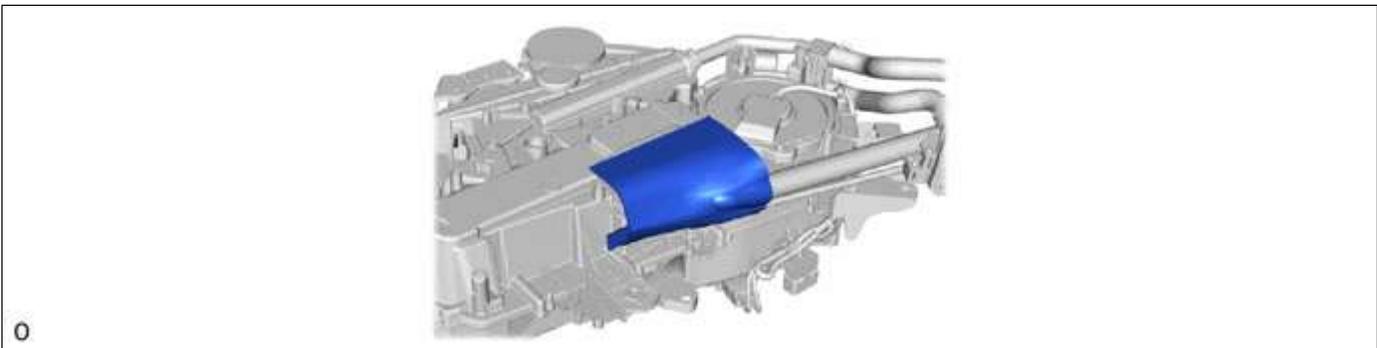

6. REMOVE AIR CONDITIONING TUBE AND ACCESSORY ASSEMBLY

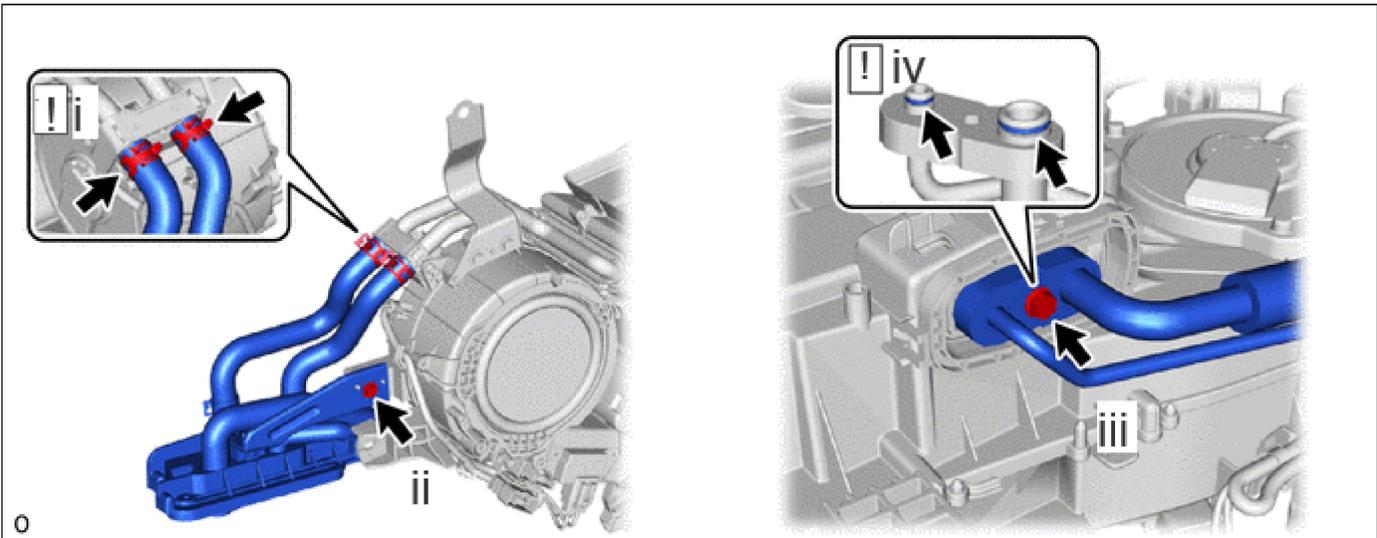

(1) Using pliers, grip the claws of the clip and slide the 2 clips to disconnect the air conditioning tube and accessory assembly.

NOTICE:

- Do not apply excessive force to the air conditioning tube and accessory assembly.
- Prepare a container or cloth in case the coolant leaks.

(2) Remove the screw.


(3) Remove the bolt and air conditioning tube and accessory assembly.

(4) Remove the 2 O-rings from the air conditioning tube and accessory assembly.


NOTICE:

Seal the openings of the disconnected parts using vinyl tape to prevent the entry of moisture and foreign matter.

7. REMOVE NO. 1 COOLER WIRING HARNESS SUB-ASSEMBLY

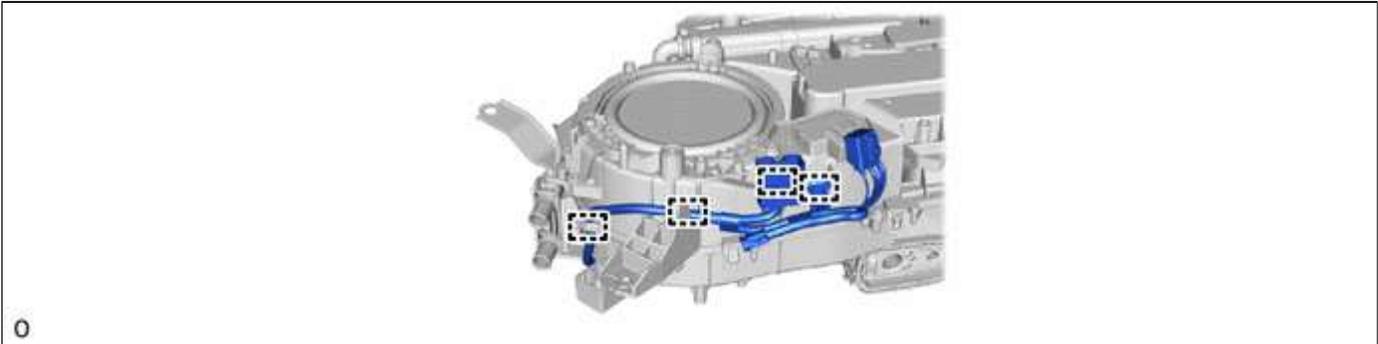

8. REMOVE REAR COOLING UNIT EXPANSION VALVE

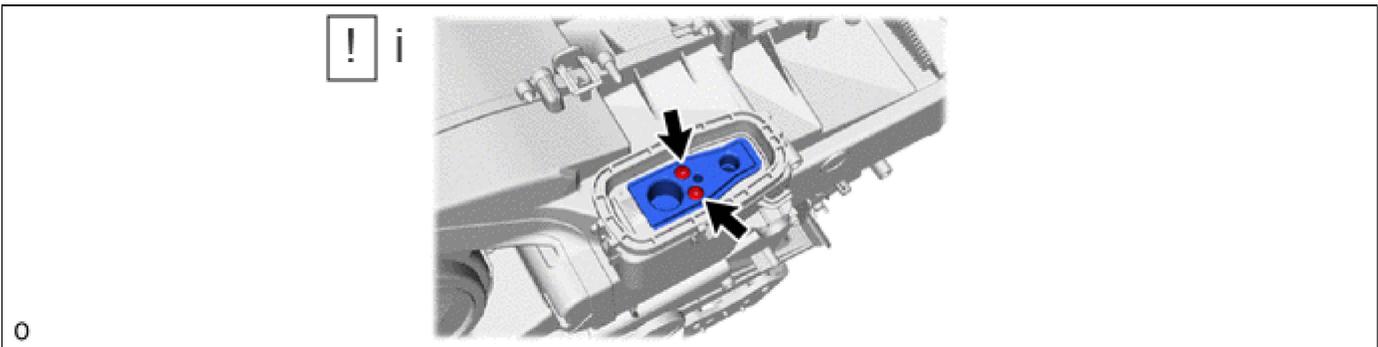


(1) Using a 4 mm hexagon socket wrench, remove the 2 hexagon bolts and rear cooling unit expansion valve.


NOTICE:

Seal the openings of the disconnected parts using vinyl tape to prevent the entry of moisture and foreign matter.


9. REMOVE REAR AIR MIX DAMPER SERVO SUB-ASSEMBLY

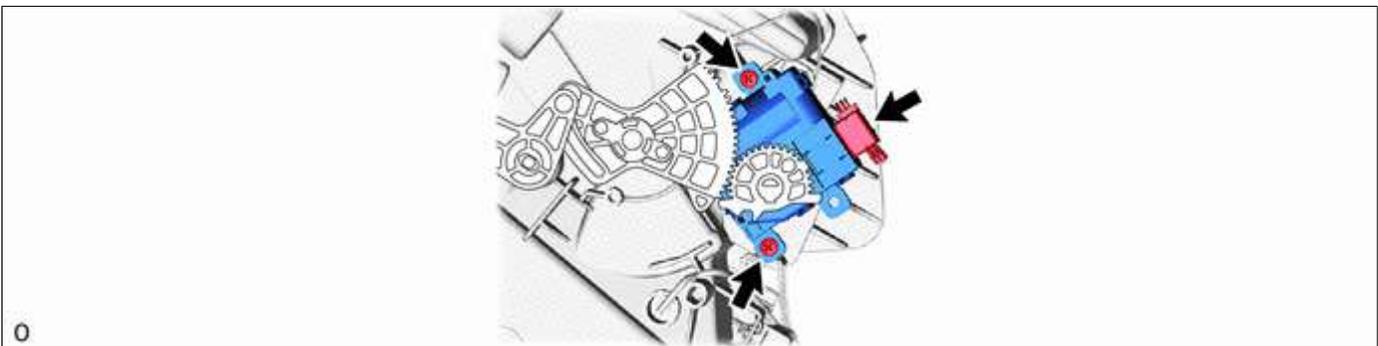


10. REMOVE REAR MODE DAMPER SERVO SUB-ASSEMBLY

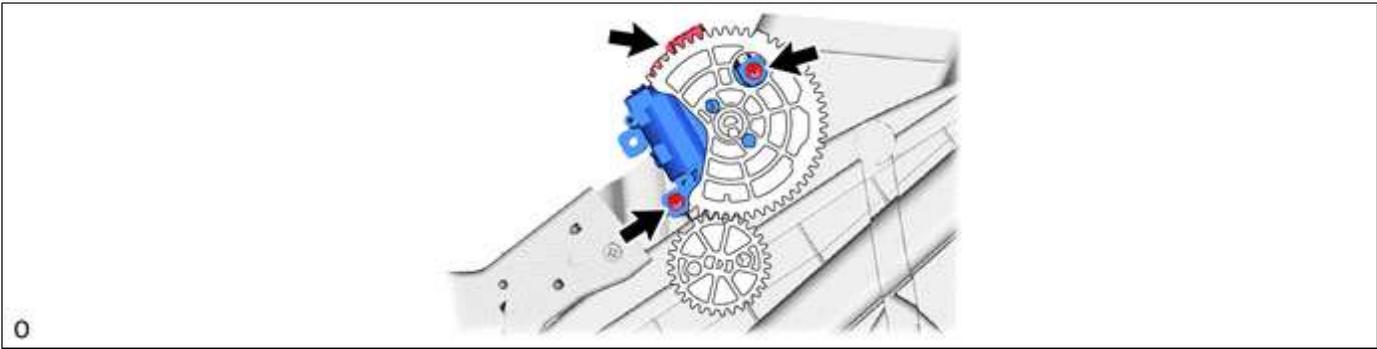


11. REMOVE REAR NO. 1 AIR CONDITIONING UNIT BRACKET

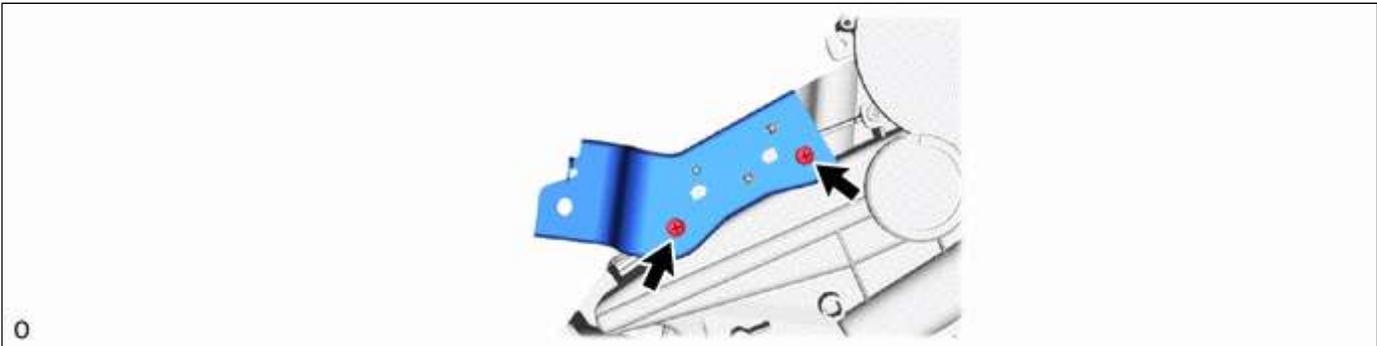

12. REMOVE BRACKET

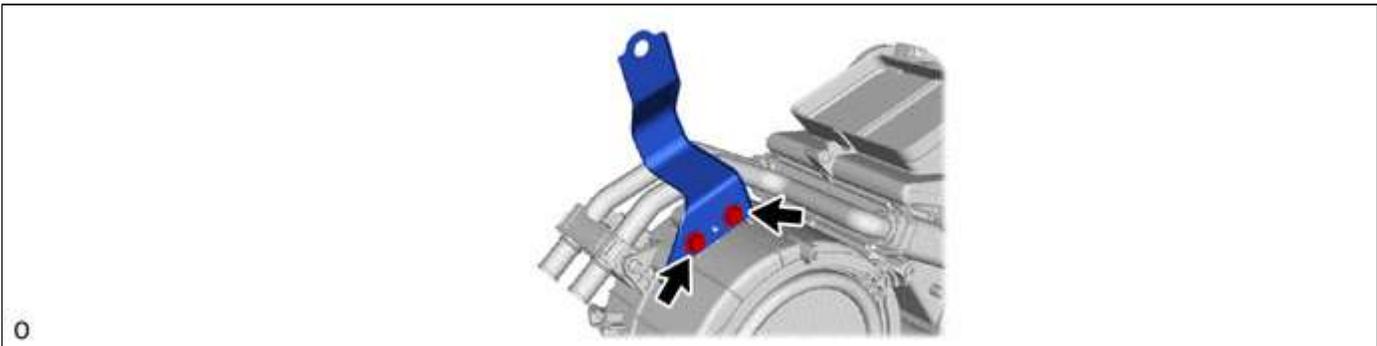

13. REMOVE HEATER RADIATOR UNIT SUB-ASSEMBLY

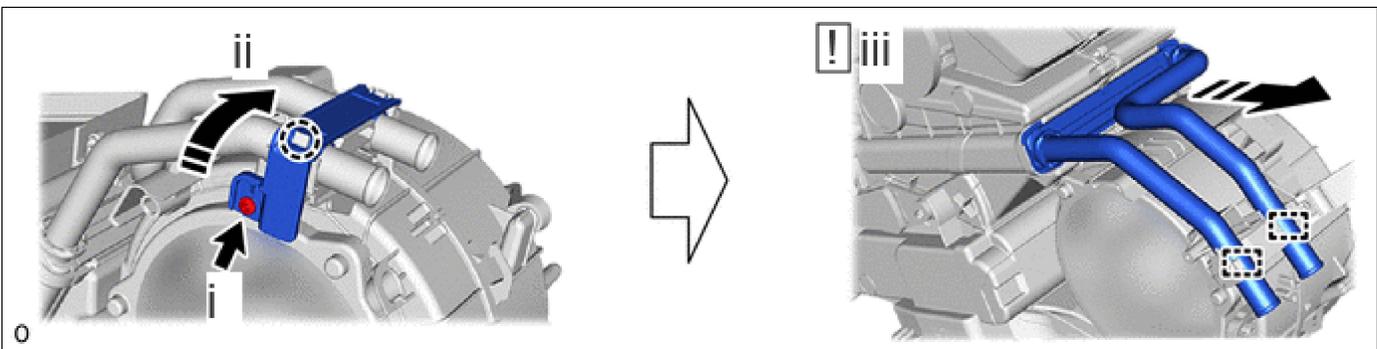


	Remove in this Direction	-	-
---	--------------------------	---	---

(1) Remove the screw.

(2) Detach the claw and roll up the heater clamp enough so that the heater radiator unit sub-assembly can be removed.


(3) Detach the clamp and remove the heater radiator unit sub-assembly as shown in the illustration.

14. REMOVE HEATER CLAMP

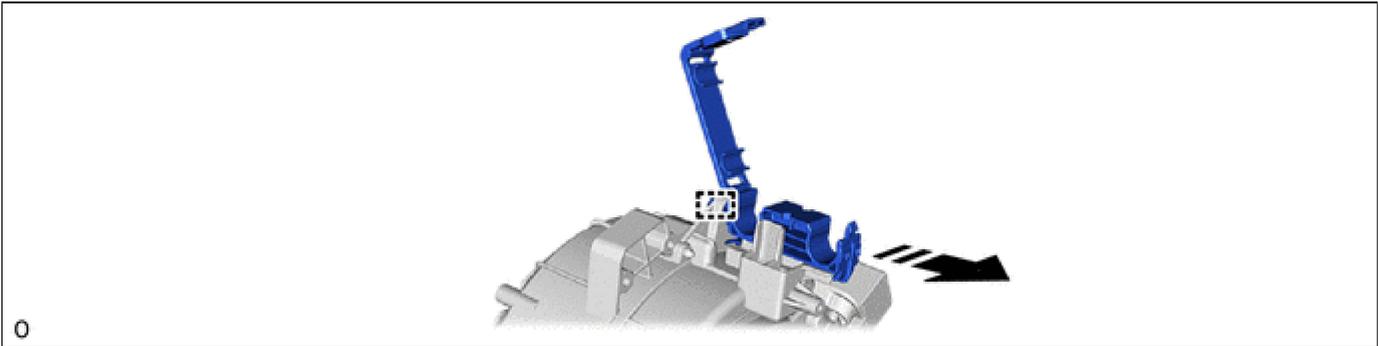

	Remove in this Direction	-	-
--	--------------------------	---	---


15. REMOVE EVAPORATOR SUB-ASSEMBLY (REAR)

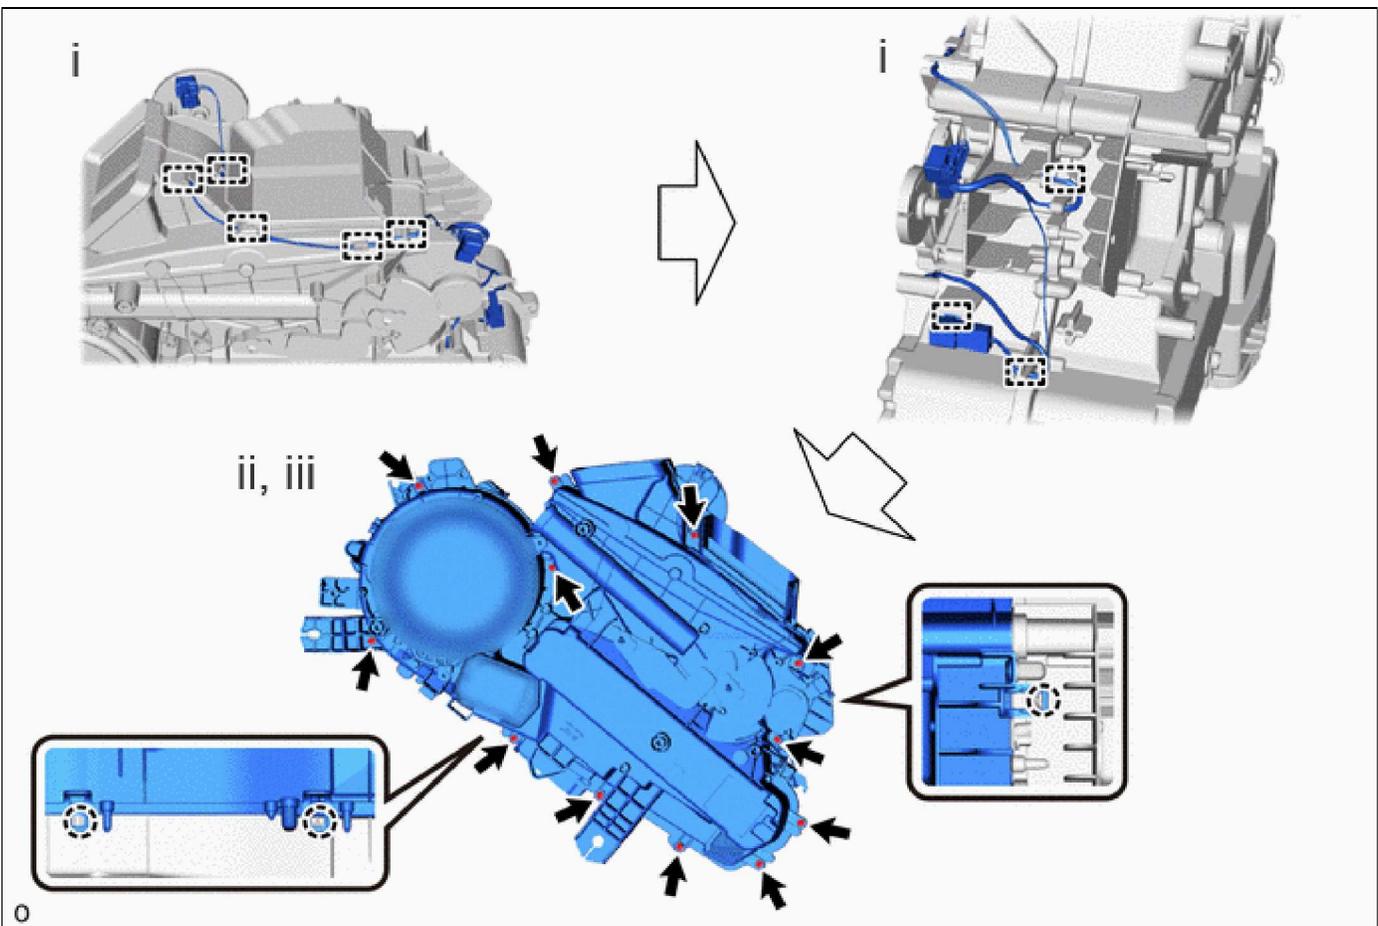

(1) Detach the clamp.

(2) Remove the 12 screws.

(3) Detach the claw and remove the cooling unit case LH.

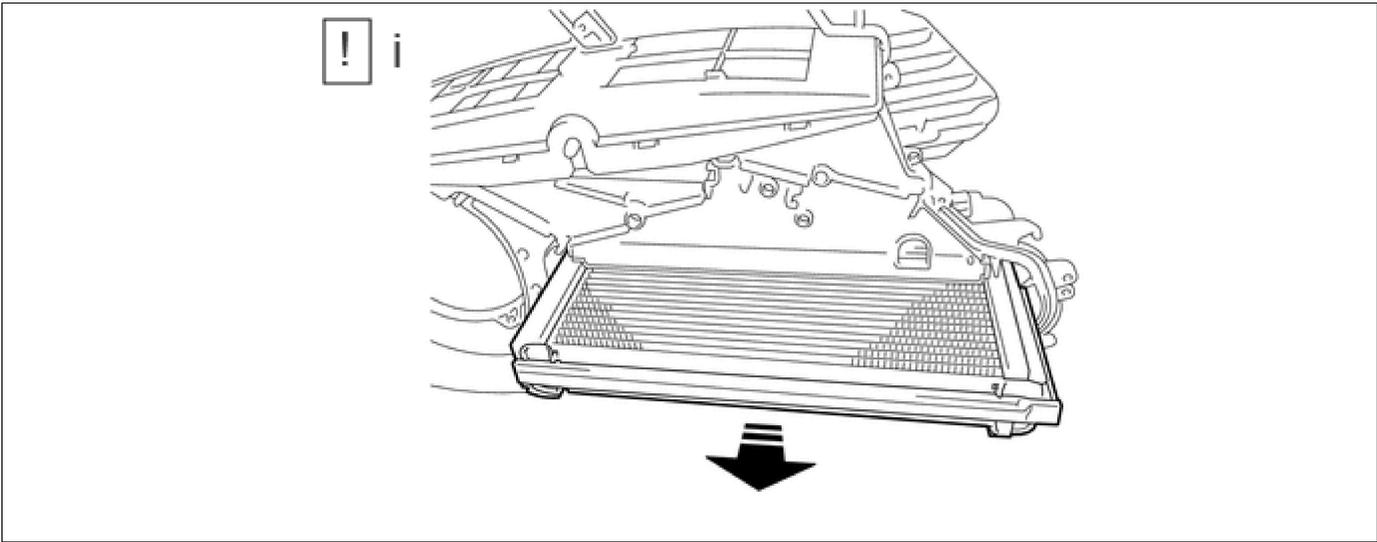

	Remove in this Direction	-	-
---	--------------------------	---	---

(1) Remove the evaporator sub-assembly (rear) as shown in the illustration.

NOTICE:

Seal the openings of the disconnected parts using vinyl tape to prevent the entry of moisture and foreign matter.

16. REMOVE NO. 2 COOLER WIRING HARNESS SUB-ASSEMBLY

Click here [WFO](#)

