

<b>Last Modified:</b> 07-05-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000002JWKH
<b>Model Year Start:</b> 2024	<b>Model:</b> Land Cruiser	<b>Prod Date Range:</b> [02/2024 - ]
<b>Title:</b> DOOR / HATCH: BACK DOOR CLOSER ECU: INITIALIZATION; 2024 MY Land Cruiser [02/2024 - ]		

## **INITIALIZATION**

### **NOTICE:**

Initialization of the multiplex network door ECU (back door initial position learning) is necessary if the following work procedures are performed while the back door is open.

- The cable to the negative (-) auxiliary battery terminal is connected.
- A power source system fuse of the power back door system is disconnected and reconnected.
- The multiplex network door ECU is replaced or the connectors are disconnected.
- The power back door unit assembly LH/RH is removed and installed or replaced.

The power back door does not operate unless the multiplex network door ECU is initialized.

### **HINT:**

- Initialization is not necessary if the above procedures are performed while the back door is closed.
- When disconnecting and reconnecting the auxiliary battery, there is an automatic learning function that completes learning when the respective system is used.

Click here 

#### (a) Initialization operation

- (1) Fully close the back door by hand.

