

L/H side of steering wheel Up/Dwn/Left/Right & OK
Hold down L/H arrow = Scroll through the 3 dash layouts

“Settings” press “OK” selections will appear.

HUD Main - Push and Hold “OK”

HUD Brightness/Position - Push and Hold “OK”

Brightness (left and right arrows to adjust) Press “Return” icon

Position (up and down arrows to move image on windshield) Press “Return” icon

HUD Driving Support - Push and Hold “OK”

Full - Additional info stacked on top of MPH etc, Press “Return” icon

Standard - Additional info to the right of MPH etc, Press “Return” icon

Minimum - Just MPH, Press “Return” icon

HUD Rotation - Push and Hold “OK”

Left and Right arrows adjust the rotation on the windshield, Press “Return” icon

LDA (Lane Departure Alert) - Push and Hold “OK” to adjust

Alert Options (Vibrate steering wheel) or (Beep)

Alert Timing – (How far away the sensors will alert you, more bars further the distance)

BSM (Blind Spot Monitor) - Push and Hold “OK” to adjust

Support Timing

Brightness

Buzzer Alert - (on or Off)

PCS (Pre-Collision System) - Push and Hold “OK” to adjust

Warning Timing

PCS - (On or Off)

PDA (Proactive Driving Assistance) - Push and Hold “OK” to adjust

Sensitivity - (High, Med or Low)

SA (Steering Assist) - (On or Off)

DA (Deceleration Assist) - (On or Off)

OAA (Obstacle Anticipation Assist) - (On or Off)

P (Intuitive Parking Assist) - Push and Hold “OK” to adjust

Volume (arrows to adjust)

RCTA (Rear Cross Traffic Alert) - Push and Hold “OK” to adjust

Volume (arrows to adjust)

RCD (Rear Camera Detection) - (On or Off)

SEA (Safe Exit Assist)

Sensitivity - (High, Med or Low)

Mirror Indicate (On or Off)

RSA (Road Sign Assist)

Notification Method - Push and Hold “OK” to adjust

Above Speed Limit

Others - Push and Hold “OK” to adjust (No Notification, Only Visual or Visual and Audio)

Notification Level (5 MPH, 3 MPH or 1 MPH)

Vehicle Settings - Push and Hold "OK" to adjust

Break Suggestions - (On or Off)

Traffic Jam Assist - (On or Off)

DMC (Driver Monitor Camera) Recording - (On or Off)

LCA (Lane Change Assist) - (On or Off)

DRCC (Dynamic Radar Cruise Control) - Push and Hold "OK" to adjust

Extended Resume Time -

Acceleration -

Guide message -

Curve Speed Reduction -

FCTA (Front Cross Traffic Alert) - Push and Hold "OK" to adjust
(On or Off)

Timing -

PBD (Powered Back Door) - Push and Hold "OK" to adjust

Opening Adjustment - push "OK" to adjust

Volume -

Select Brake Type

4 selections to pick from (concerns Trailer Brake settings).

TPWS Setting - Push and Hold "OK" to adjust

Tire Set Switching –

Register New Valve ID - Push "OK" to adjust

Tire Rotation – (confirm Yes or No)

Tire Pressure Setting -

Setting by Specified Pressure-

Setting by Current Pressure-

Pressure unit setting -

Scheduled Maintenance - Push "OK" to adjust

Reset Data – (confirm Yes or No)

Oil Maintenance- Push "OK" to adjust

Reset Data – (confirm Yes or No)

Rear Seat Reminder - (On or Off)

Driver Monitor Settings - Push and Hold "OK" to adjust

Driver Monitor Alert - (On or Off)

Stop Lights Display - (On or Off)

Meter Settings - Push and Hold "OK" to adjust

Language -

Units -

Meter Type -

Meter Style -

Dial Type -

Fuel Economy -

Drive Info Items -

Trip A Items -

Trip B Items -

Pop Up Display -

Default Settings -