

Last Modified: 07-05-2024	6.11:8.1.0	Doc ID: RM100000002JUXP
Model Year Start: 2024	Model: Land Cruiser	Prod Date Range: [02/2024 -]
Title: INTERIOR PANELS / TRIM: FLOOR CARPET: REMOVAL; 2024 MY Land Cruiser [02/2024 -]		

REMOVAL

CAUTION / NOTICE / HINT

The necessary procedures (adjustment, calibration, initialization or registration) that must be performed after parts are removed and installed, or replaced during front floor carpet assembly removal/installation are shown below.


HINT:

When the cable is disconnected/reconnected to the auxiliary battery terminal, systems temporarily stop operating. However, each system has a function that completes learning the first time the system is used.

- Learning completes when vehicle is driven

EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	NECESSARY PROCEDURES	LINK
Front camera system	Drive the vehicle straight ahead at 35 km/h (22 mph) or more for 5 seconds or more.	




- Learning completes when vehicle is operated normally


EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	NECESSARY PROCEDURES	LINK
Air Conditioning system	After the ignition switch is turned to ON, the servo motor standard position is recognized.	-
Power back door system	Fully close the back door by hand. HINT: Initialization is not necessary if the above procedures are performed while the back door is closed.	

CAUTION / NOTICE / HINT

COMPONENTS (REMOVAL)




PROCEDURE		PART NAME CODE			
1	PRECAUTION	-	INFO	-	-
2	FRONT SEAT ASSEMBLY LH	-	-	-	-
3	FRONT SEAT ASSEMBLY RH	-	-	-	-
4	FRONT CONSOLE BOX	-	-	-	-
5	REAR NO. 1 SEAT ASSEMBLY LH	-	-	-	-
6	REAR NO. 1 SEAT ASSEMBLY RH	-	-	-	-

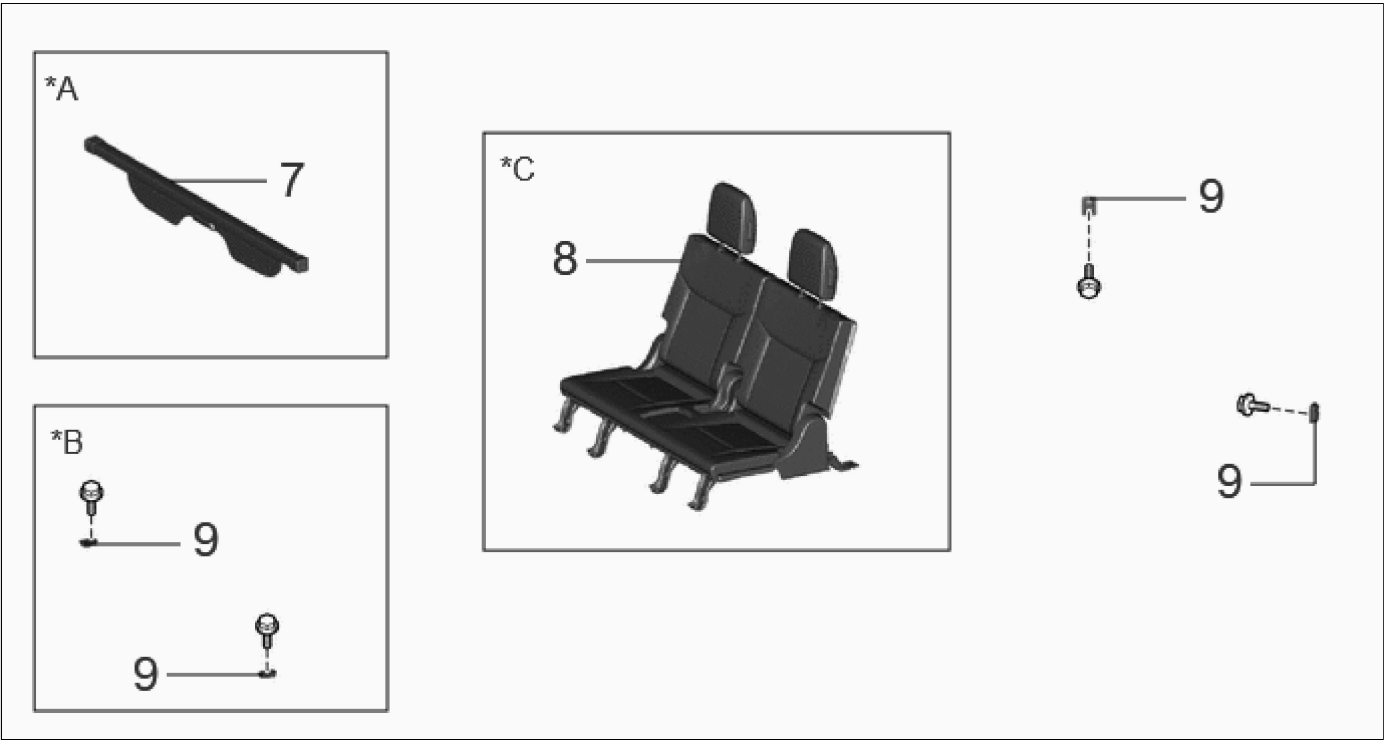

PROCEDURE		PART NAME CODE			
7	TONNEAU COVER ASSEMBLY	64910N	-	-	-
8	REAR NO. 2 SEAT ASSEMBLY	-	-	-	-
9	ROPE HOOK ASSEMBLY	-	-	-	-


*A	w/ Tonneau Cover	*B	w/o Rear No. 2 Seat
*C	w/ Rear No. 2 Seat	-	-

*A

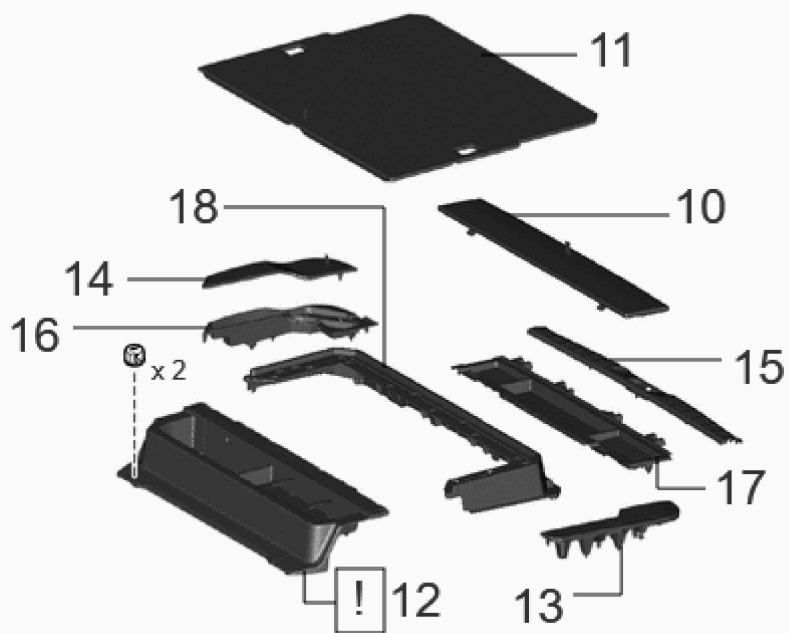





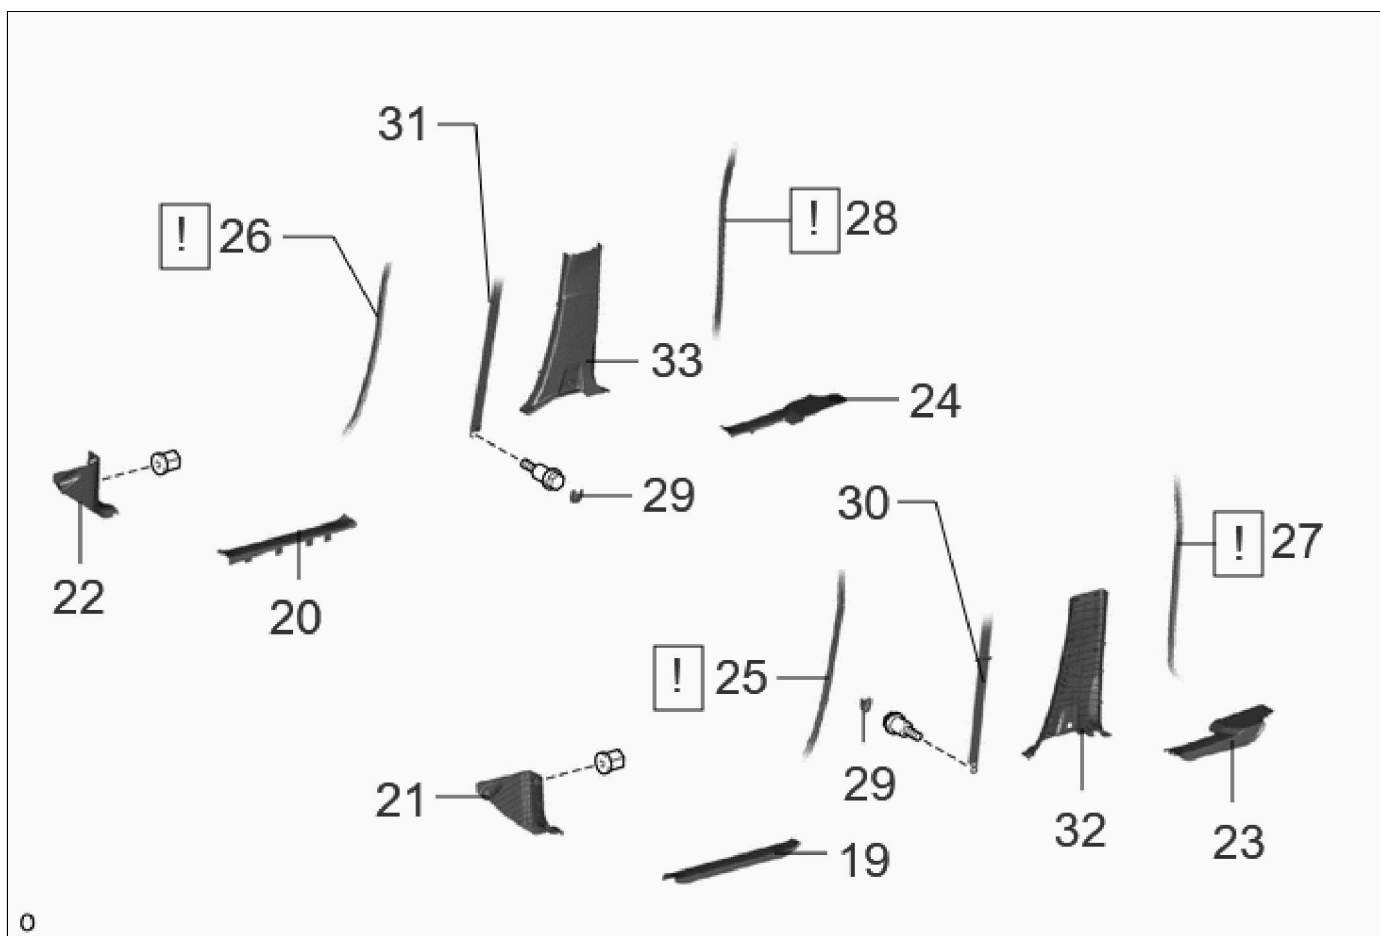

PROCEDURE		PART NAME CODE			
10	DECK BOARD ASSEMBLY	58410B	-	-	-
11	DECK BOARD ASSEMBLY	58410B	-	-	-
12	REAR DECK FLOOR BOX	64993	INFO	-	-
13	REAR FLOOR BOARD REAR LH	58418H	-	-	-
14	REAR FLOOR BOARD REAR RH	58417B	-	-	-
15	REAR FLOOR REAR MAT SUPPORT PLATE	58574A	-	-	-
16	DECK SIDE TRIM BOX RH	64741B	-	-	-
17	REAR DECK FLOOR BOX	64993	-	-	-
18	REAR NO. 1 FLOOR BOARD ASSEMBLY	58470E	-	-	-


*A	w/o Rear No. 2 Seat	-	-
----	---------------------	---	---









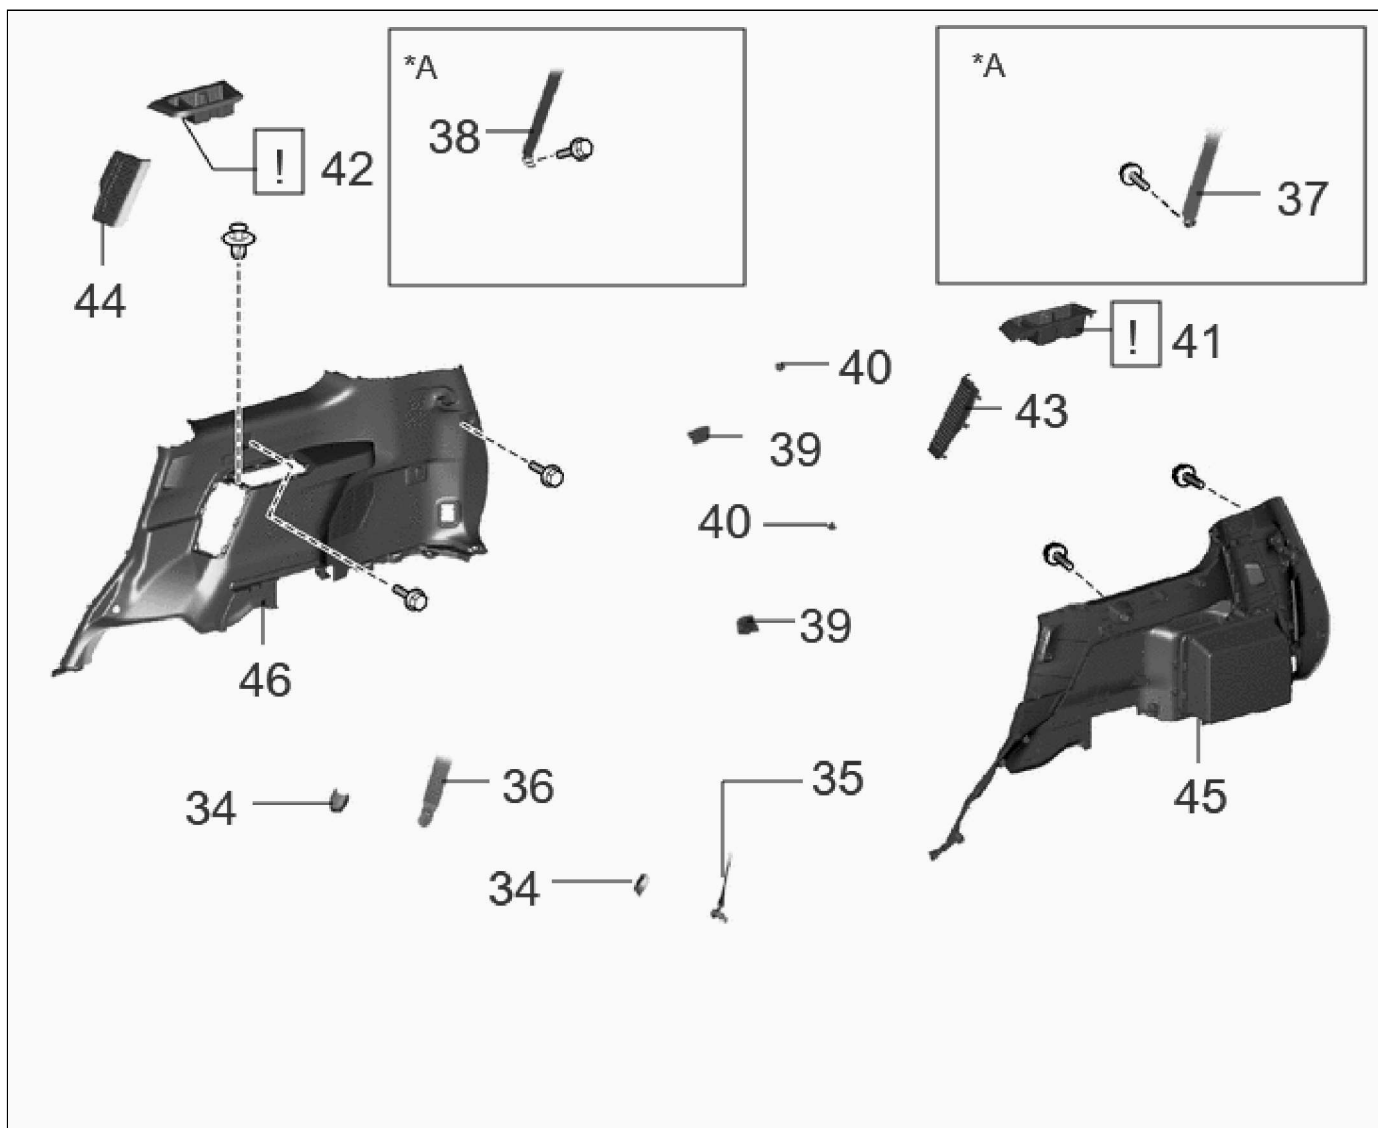

0

PROCEDURE		PART NAME CODE			
19	FRONT DOOR SCUFF PLATE LH	67914B	-	-	-
20	FRONT DOOR SCUFF PLATE RH	67913B	-	-	-
21	COWL SIDE TRIM BOARD LH	62112	-	-	-
22	COWL SIDE TRIM BOARD RH	62111C	-	-	-
23	REAR DOOR SCUFF PLATE LH	67918E	-	-	-
24	REAR DOOR SCUFF PLATE RH	67917C	-	-	-
25	FRONT DOOR OPENING TRIM WEATHERSTRIP LH	62312B	INFO	-	-
26	FRONT DOOR OPENING TRIM WEATHERSTRIP RH	62311B	INFO	-	-
27	REAR DOOR OPENING TRIM WEATHERSTRIP LH	62332C	INFO	-	-
28	REAR DOOR OPENING TRIM WEATHERSTRIP RH	62331C	INFO	-	-
29	OUTER LAP BELT ANCHOR COVER	73233	-	-	-
30	FRONT SEAT OUTER BELT ASSEMBLY LH (LAP BELT ANCHOR)	73220	-	-	-
31	FRONT SEAT OUTER BELT ASSEMBLY RH (LAP BELT ANCHOR)	73210	-	-	-


PROCEDURE		PART NAME CODE			
32	CENTER PILLAR LOWER GARNISH LH	62414A	-	-	-
33	CENTER PILLAR LOWER GARNISH RH	62413A	-	-	-







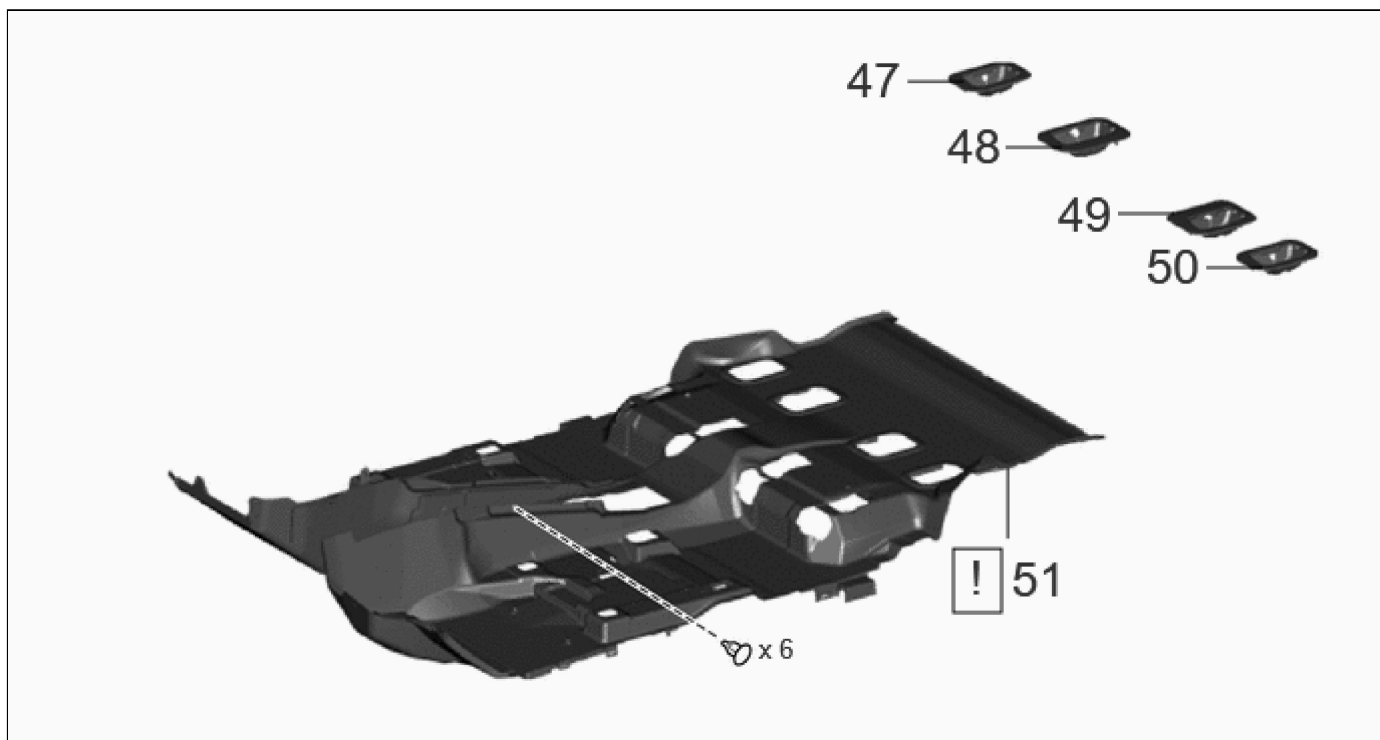

PROCEDURE		PART NAME CODE			
34	OUTER LAP BELT ANCHOR COVER	73233	-	-	-
35	REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH (LAP BELT ANCHOR)	73370E	-	-	-
36	REAR NO. 1 SEAT OUTER BELT ASSEMBLY RH (LAP BELT ANCHOR)	73360D	-	-	-

PROCEDURE		PART NAME CODE			
37	REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH (LAP BELT ANCHOR)	73570	-	-	-
38	REAR NO. 2 SEAT OUTER BELT ASSEMBLY RH (LAP BELT ANCHOR)	73560	-	-	-
39	NO. 1 TONNEAU COVER HOLDER CAP	64937A	-	-	-
40	NO. 1 LUGGAGE COMPARTMENT TRIM HOOK	64725D	-	-	-
41	NO. 2 CUP HOLDER	66992			
42	NO. 1 CUP HOLDER	66991B		-	-
43	BATTERY SERVICE HOLE COVER ASSEMBLY LH	58440J	-	-	-
44	BATTERY SERVICE HOLE COVER ASSEMBLY RH	58440H	-	-	-
45	DECK TRIM SIDE PANEL ASSEMBLY LH	64740C	-	-	-
46	DECK TRIM SIDE PANEL ASSEMBLY RH	64730B	-	-	-

*A	w/o Rear No. 2 Seat	-	-
----	---------------------	---	---




PROCEDURE		PART NAME CODE			
47	REAR NO. 1 SEAT PROTECTOR	71695S	-	-	-

PROCEDURE		PART NAME CODE			
48	REAR NO. 2 SEAT PROTECTOR	71695T	-	-	-
49	REAR NO. 3 SEAT PROTECTOR	71695Y	-	-	-
50	REAR NO. 1 SEAT PROTECTOR	71695S	-	-	-
51	FRONT FLOOR CARPET ASSEMBLY	58510D	-	-	-

PROCEDURE


1. PRECAUTION



CAUTION:

Be sure to read precaution thoroughly before servicing.

Click here [INFO](#)



NOTICE:

After turning the ignition switch off, waiting time may be required before disconnecting the cable from the negative (-) auxiliary battery terminal.

Click here [INFO](#)

2. REMOVE FRONT SEAT ASSEMBLY LH

(a) for Manual Seat:

Click here [INFO](#)

(b) for Power Seat:

Click here [INFO](#)

3. REMOVE FRONT SEAT ASSEMBLY RH

(a) Use the same procedure described for the LH side.

4. REMOVE FRONT CONSOLE BOX

(a) w/ Cool Box:

Click here [INFO](#)

(b) w/o Cool Box:

Click here [INFO](#)

5. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

Click here [INFO](#)

6. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

(a) for Single-Passenger Seat:

Use the same procedure described for the LH side.

(b) for 2-Passenger Seat:

Click here [INFO](#)

7. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

Click here [INFO](#)

8. REMOVE REAR NO. 2 SEAT ASSEMBLY (w/ Rear No. 2 Seat)

Click here [INFO](#)

9. REMOVE ROPE HOOK ASSEMBLY (w/o Rear No. 2 Seat)

Click here [INFO](#)

10. REMOVE DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)

Click here [INFO](#)

11. REMOVE DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)

Click here [INFO](#)

12. REMOVE REAR DECK FLOOR BOX (w/o Rear No. 2 Seat)

	Click here INFO
---	---------------------------------

13. REMOVE REAR FLOOR BOARD REAR LH (w/o Rear No. 2 Seat)

Click here [INFO](#)

14. REMOVE REAR FLOOR BOARD REAR RH (w/o Rear No. 2 Seat)

Click here [INFO](#)

15. REMOVE REAR FLOOR REAR MAT SUPPORT PLATE (w/o Rear No. 2 Seat)

Click here [INFO](#)

16. REMOVE DECK SIDE TRIM BOX RH (w/o Rear No. 2 Seat)

Click here [INFO](#)


17. REMOVE REAR DECK FLOOR BOX (w/o Rear No. 2 Seat)

Click here [INFO](#)

18. REMOVE REAR NO. 1 FLOOR BOARD ASSEMBLY (w/o Rear No.2 Seat)

Click here 

19. REMOVE FRONT DOOR SCUFF PLATE LH

Click here 

20. REMOVE FRONT DOOR SCUFF PLATE RH

(a) Use the same procedure described for the LH side.

21. REMOVE COWL SIDE TRIM BOARD LH

Click here 

22. REMOVE COWL SIDE TRIM BOARD RH

(a) Use the same procedure described for the LH side.

23. REMOVE REAR DOOR SCUFF PLATE LH

Click here 

24. REMOVE REAR DOOR SCUFF PLATE RH

(a) Use the same procedure described for the LH side.

25. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH



- Remove a part of the front door opening trim weatherstrip LH so that the center pillar lower garnish LH can be removed.

Click here 

26. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

(a) Use the same procedure described for the LH side.

27. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH



- Remove a part of the rear door opening trim weatherstrip LH so that the center pillar lower garnish LH and can be removed.

Click here 

28. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

(a) Use the same procedure described for the LH side.

29. REMOVE OUTER LAP BELT ANCHOR COVER

Click here 

30. REMOVE FRONT SEAT OUTER BELT ASSEMBLY LH (LAP BELT ANCHOR)

Click here 

31. REMOVE FRONT SEAT OUTER BELT ASSEMBLY RH (LAP BELT ANCHOR)

(a) Use the same procedure described for the LH side.

32. REMOVE CENTER PILLAR LOWER GARNISH LH

Click here 


33. REMOVE CENTER PILLAR LOWER GARNISH RH

(a) Use the same procedure described for the LH side.

34. REMOVE OUTER LAP BELT ANCHOR COVER

Click here 

35. REMOVE REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH (LAP BELT ANCHOR)

Click here 

36. REMOVE REAR NO. 1 SEAT OUTER BELT ASSEMBLY RH (LAP BELT ANCHOR)

(a) Use the same procedure described for the LH side.

37. REMOVE REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH (LAP BELT ANCHOR) (w/ Rear No.2 Seat)

Click here 

38. REMOVE REAR NO. 2 SEAT OUTER BELT ASSEMBLY RH (LAP BELT ANCHOR) (w/ Rear No.2 Seat)

(a) Use the same procedure described for the LH side.

39. REMOVE NO. 1 TONNEAU COVER HOLDER CAP

Click here 

40. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM HOOK

Click here 

41. REMOVE NO. 2 CUP HOLDER

	Click here 
---	--

42. REMOVE NO. 1 CUP HOLDER

(a) Use the same procedure described for the No. 2 cup holder.

43. REMOVE BATTERY SERVICE HOLE COVER ASSEMBLY LH

Click here 

44. REMOVE BATTERY SERVICE HOLE COVER ASSEMBLY RH

(a) Use the same procedure described for the LH side.

45. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH

Click here 

46. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH

Click here [INFO](#)

47. REMOVE REAR NO. 1 SEAT PROTECTOR

Click here [INFO](#)

48. REMOVE REAR NO. 2 SEAT PROTECTOR

Click here [INFO](#)


49. REMOVE REAR NO. 3 SEAT PROTECTOR

Click here [INFO](#)


50. REMOVE REAR NO. 1 SEAT PROTECTOR

Click here [INFO](#)

51. REMOVE FRONT FLOOR CARPET ASSEMBLY

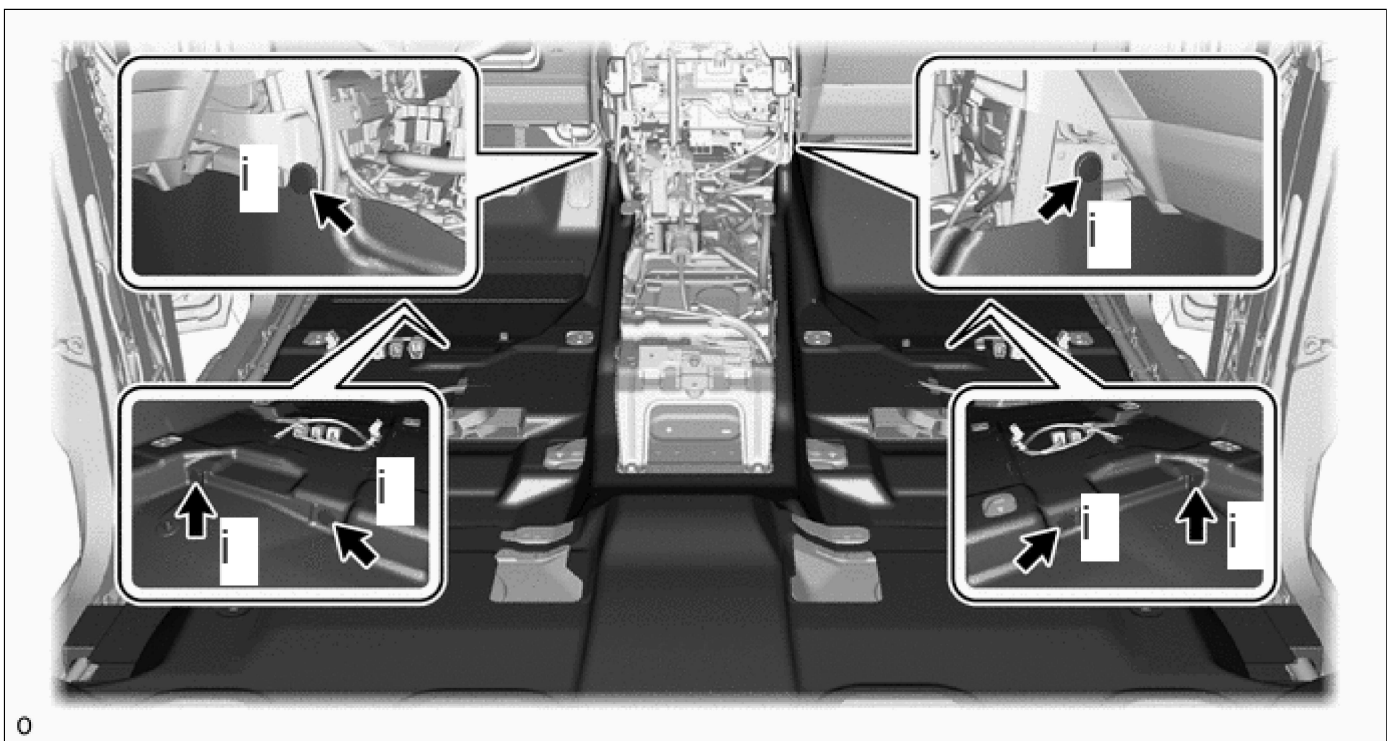

(1) Remove the 6 clips.

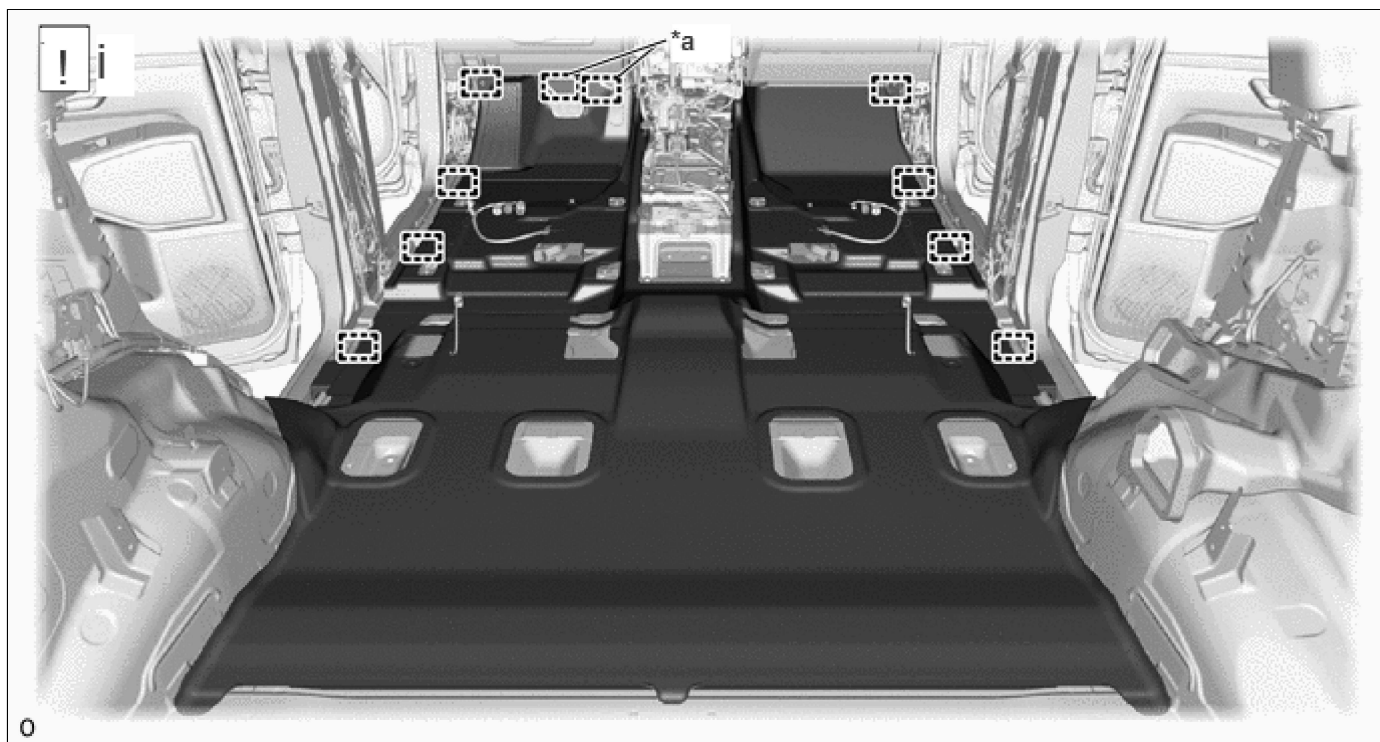

*a	Fastener	-	-
----	----------	---	---

(1) Detach the fasteners and guides to remove the front floor carpet assembly.

NOTICE:

Do not pull the slit part of the front floor carpet assembly strongly because there is a risk of damage.

