

Last Modified: 07-05-2024	6.11:8.1.0	Doc ID: RM100000002I93I
Model Year Start: 2024	Model: Land Cruiser	Prod Date Range: [02/2024 -]
Title: SEAT: REAR NO. 1 SEAT ASSEMBLY (for 60/40 Split Seat Type RH Side): REMOVAL; 2024 MY Land Cruiser [02/2024 -]		

REMOVAL

CAUTION / NOTICE / HINT

CAUTION:




- Wear protective gloves. Sharp areas on the parts may injure your hands.
- There is risk of injury.



COMPONENTS (REMOVAL)



0

PROCEDURE		PART NAME CODE			
1	REAR SEAT HEADREST ASSEMBLY	71940M	-	-	-
2	REAR NO. 1 SEAT CENTER HEADREST ASSEMBLY	71960G	-	-	
3	REAR NO. 1 SEAT CUSHION HINGE COVER	71691W	INFO	-	-
4	REAR NO. 3 SEAT CUSHION HINGE COVER	71692N	INFO	-	-
5	REAR NO. 1 SEAT ASSEMBLY RH	-	INFO	-	-

PROCEDURE

1. REMOVE REAR SEAT HEADREST ASSEMBLY




0

2. REMOVE REAR NO. 1 SEAT CENTER HEADREST ASSEMBLY




3. REMOVE REAR NO. 1 SEAT CUSHION HINGE COVER

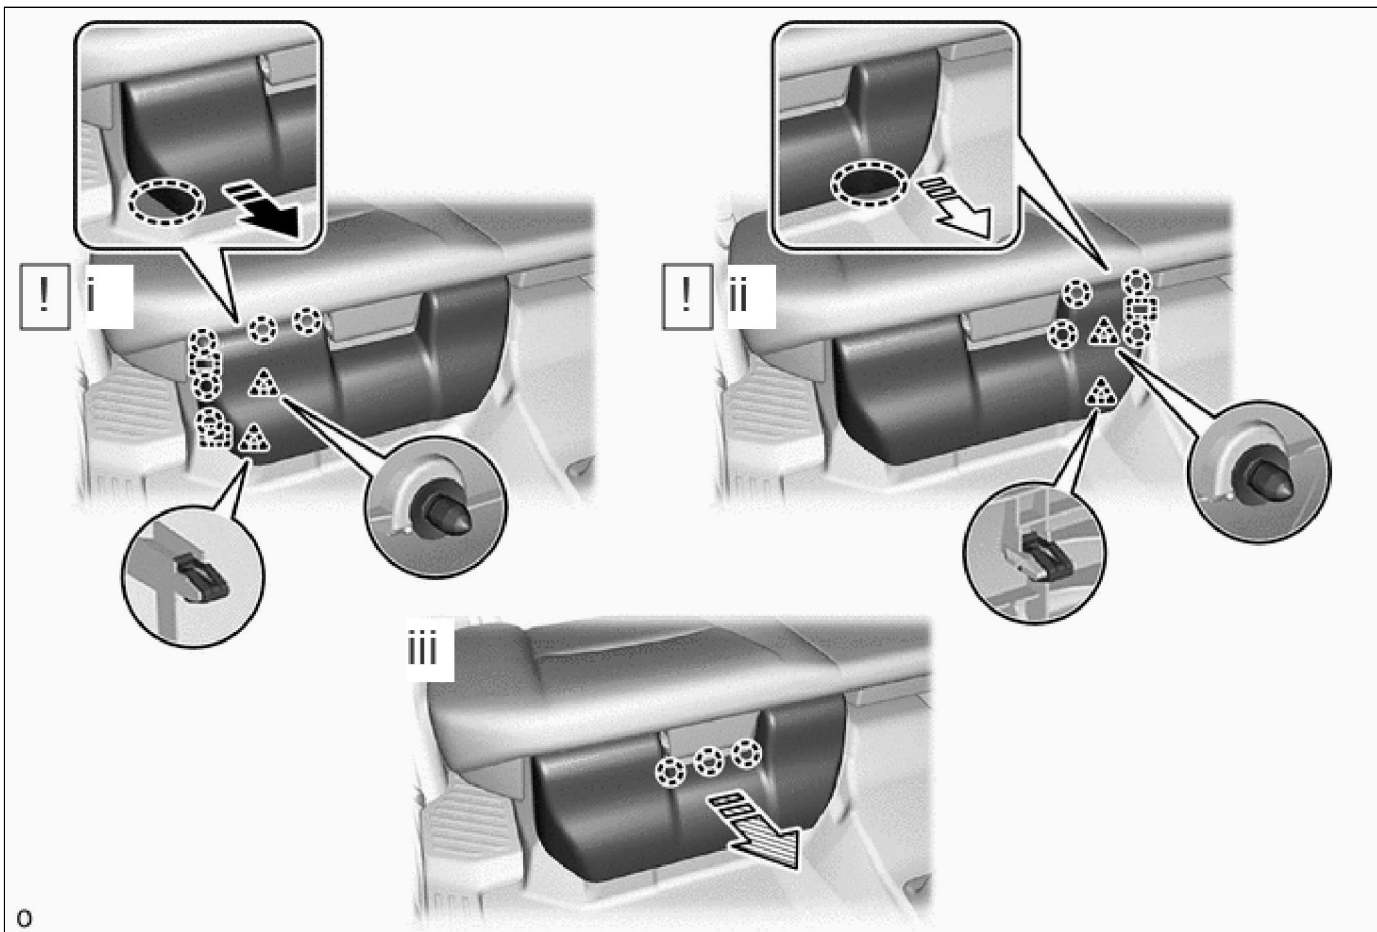


	Place Hand Here		Remove in this Direction (1)
	Remove in this Direction (2)		Remove in this Direction (3)


- (1) Place your hand at the position shown in the illustration and pull in the removal direction (1) to detach the clip and claw.
- (2) Place your hand at the position shown in the illustration and pull in the removal direction (2) to detach the clip and claw.
- (3) Pull in the removal direction (3) to detach the claw to remove the rear No. 1 seat cushion hinge cover as shown in the illustration.

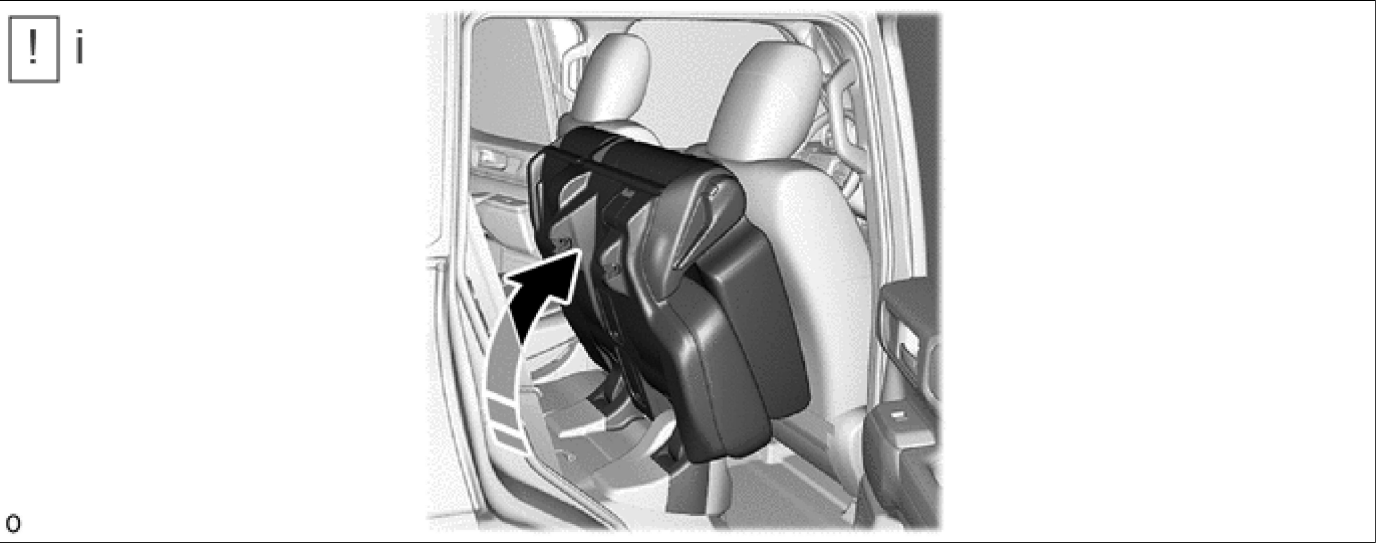


4. REMOVE REAR NO. 3 SEAT CUSHION HINGE COVER




	Fold in this Direction	-	-
-----------------------------------------------------------------------------------	------------------------	---	---

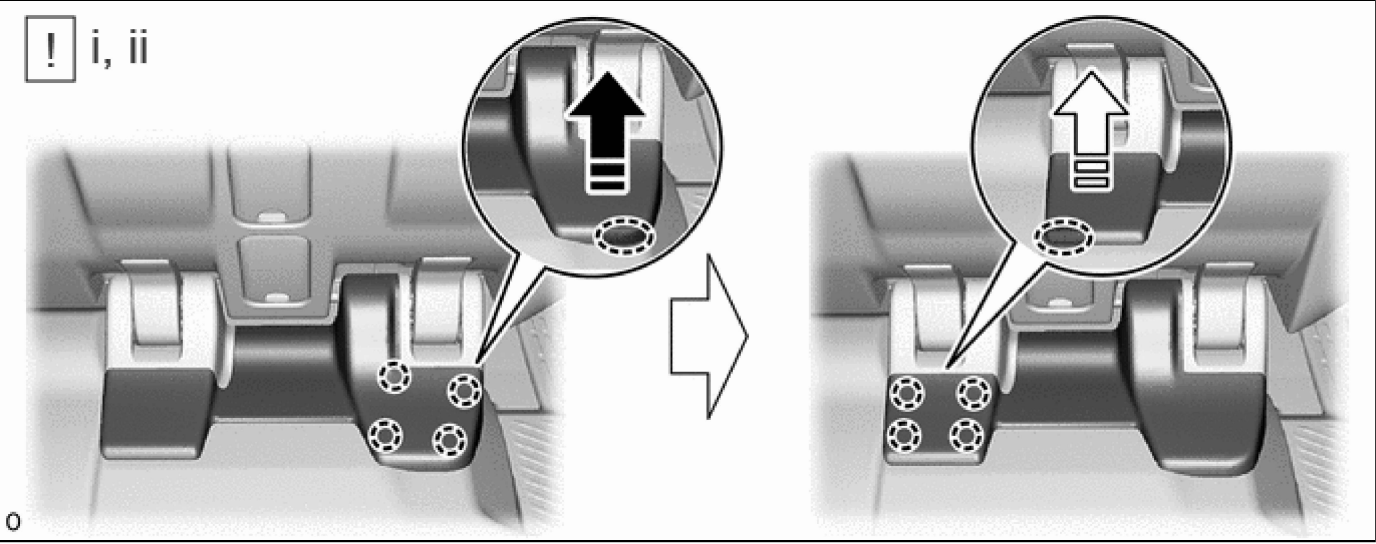(1) Fold down the rear No. 1 seat assembly RH.



	Place Hand Here		Remove in this Direction (1)
	Remove in this Direction (2)	-	-

- (1) Place your hand at the position shown in the illustration and pull in the removal direction (1) to detach the claw.
- (2) Place your hand at the position shown in the illustration and pull in the removal direction (2) to detach the claw.

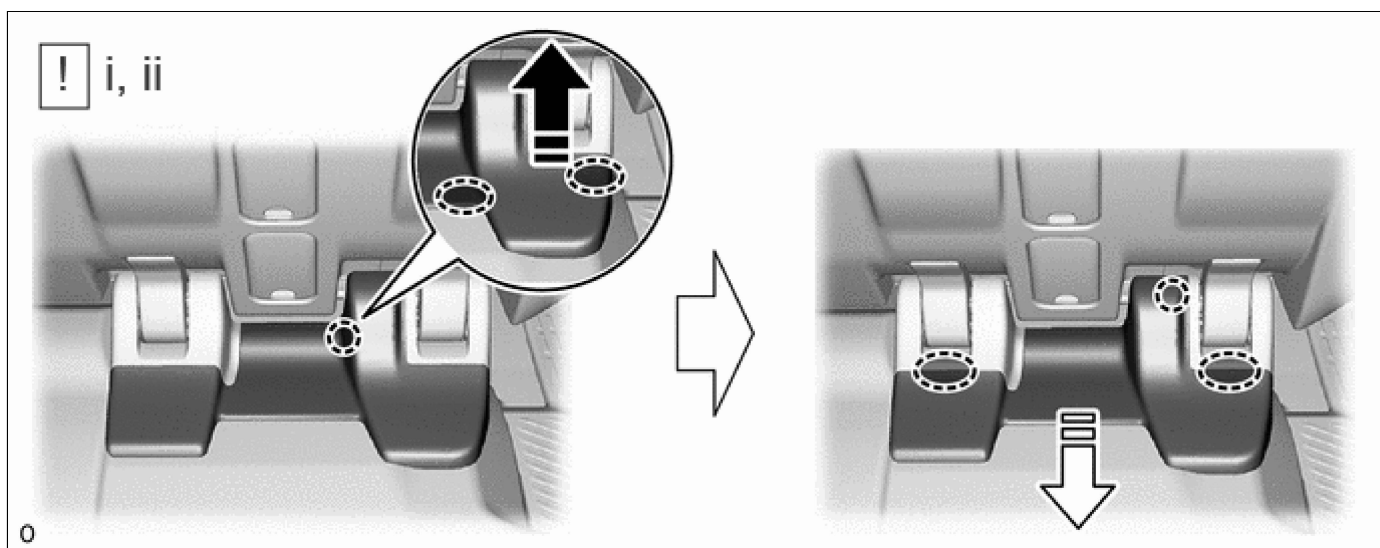


	Place Hand Here		Remove in this Direction (1)
	Remove in this Direction (2)	-	-

(1) Place your hand at the position shown in the illustration and pull in the removal direction (1) to detach the claw.

(2) Place your hand at the position shown in the illustration and pull in the removal direction (2) to detach the claw and remove the rear No. 3 seat cushion hinge cover.

5. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

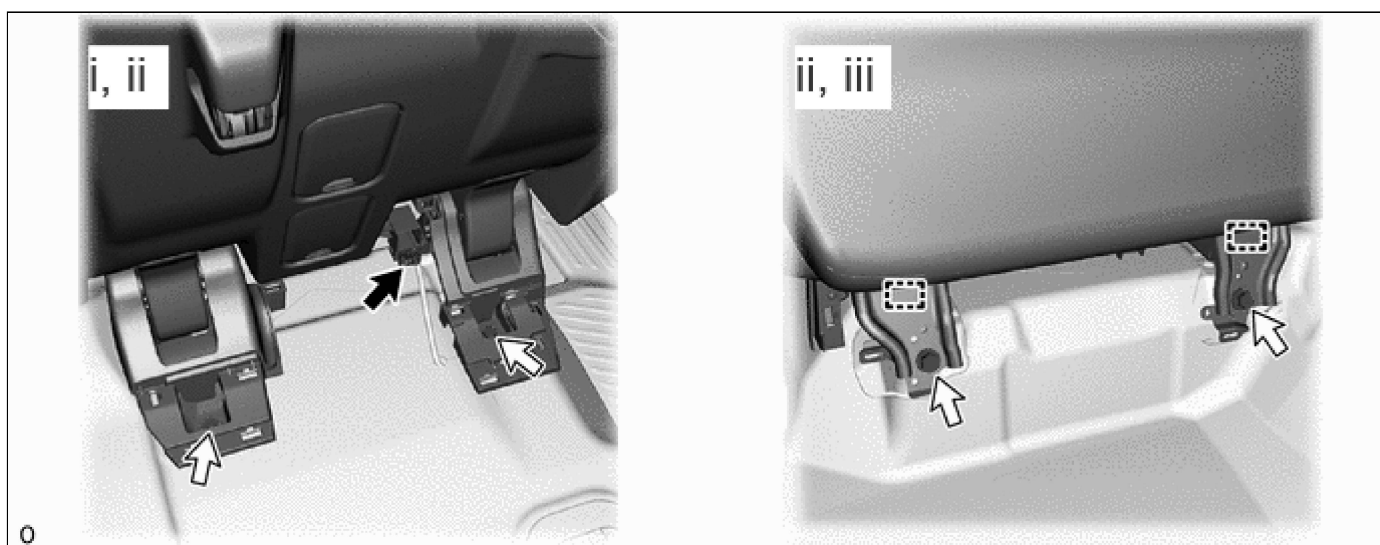


	Connector		Bolt
--	-----------	--	------

(1) Disconnect the connector.

(2) Remove the 4 bolts.

(3) Pull out the 2 location pins of the rear No. 1 seat assembly RH.

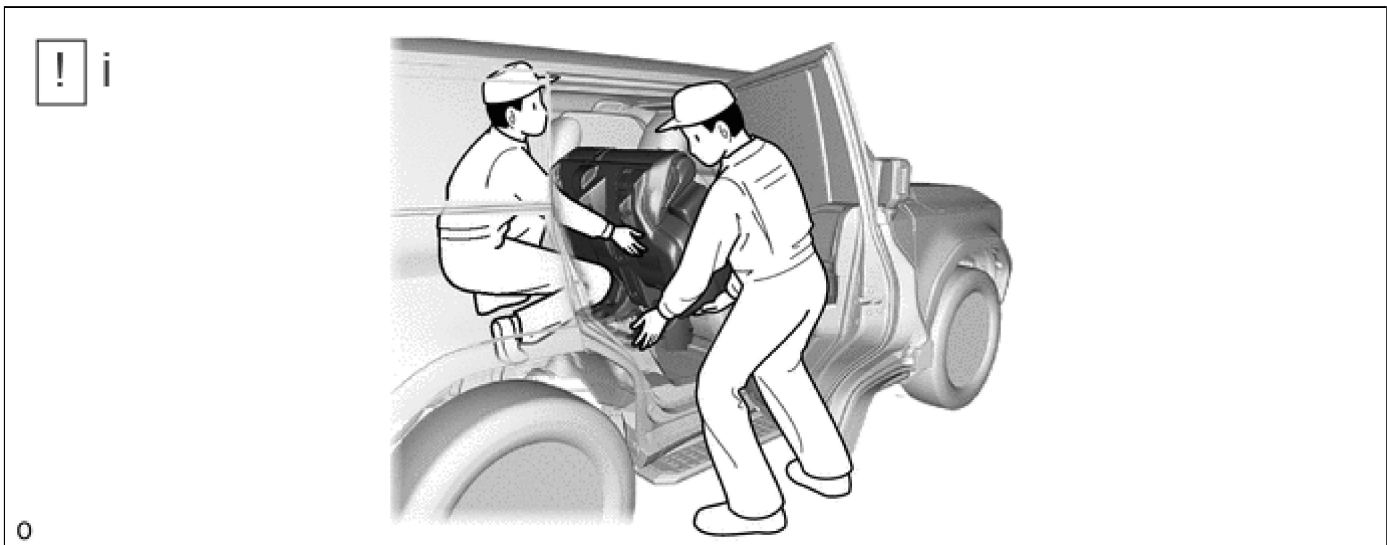

(1) Remove and carry the rear No. 1 seat assembly RH out of the vehicle.

NOTICE:

- Protect the rear No. 1 seat legs.
- Carrying the rear No. 1 seat assembly RH from the vehicle must be performed by multiple people.
- Do not damage the rear No. 1 seat assembly RH, body exterior or interior parts.

