


Position of Parts in Seat (Rear No.1 Seat(60/40 Split Seat))

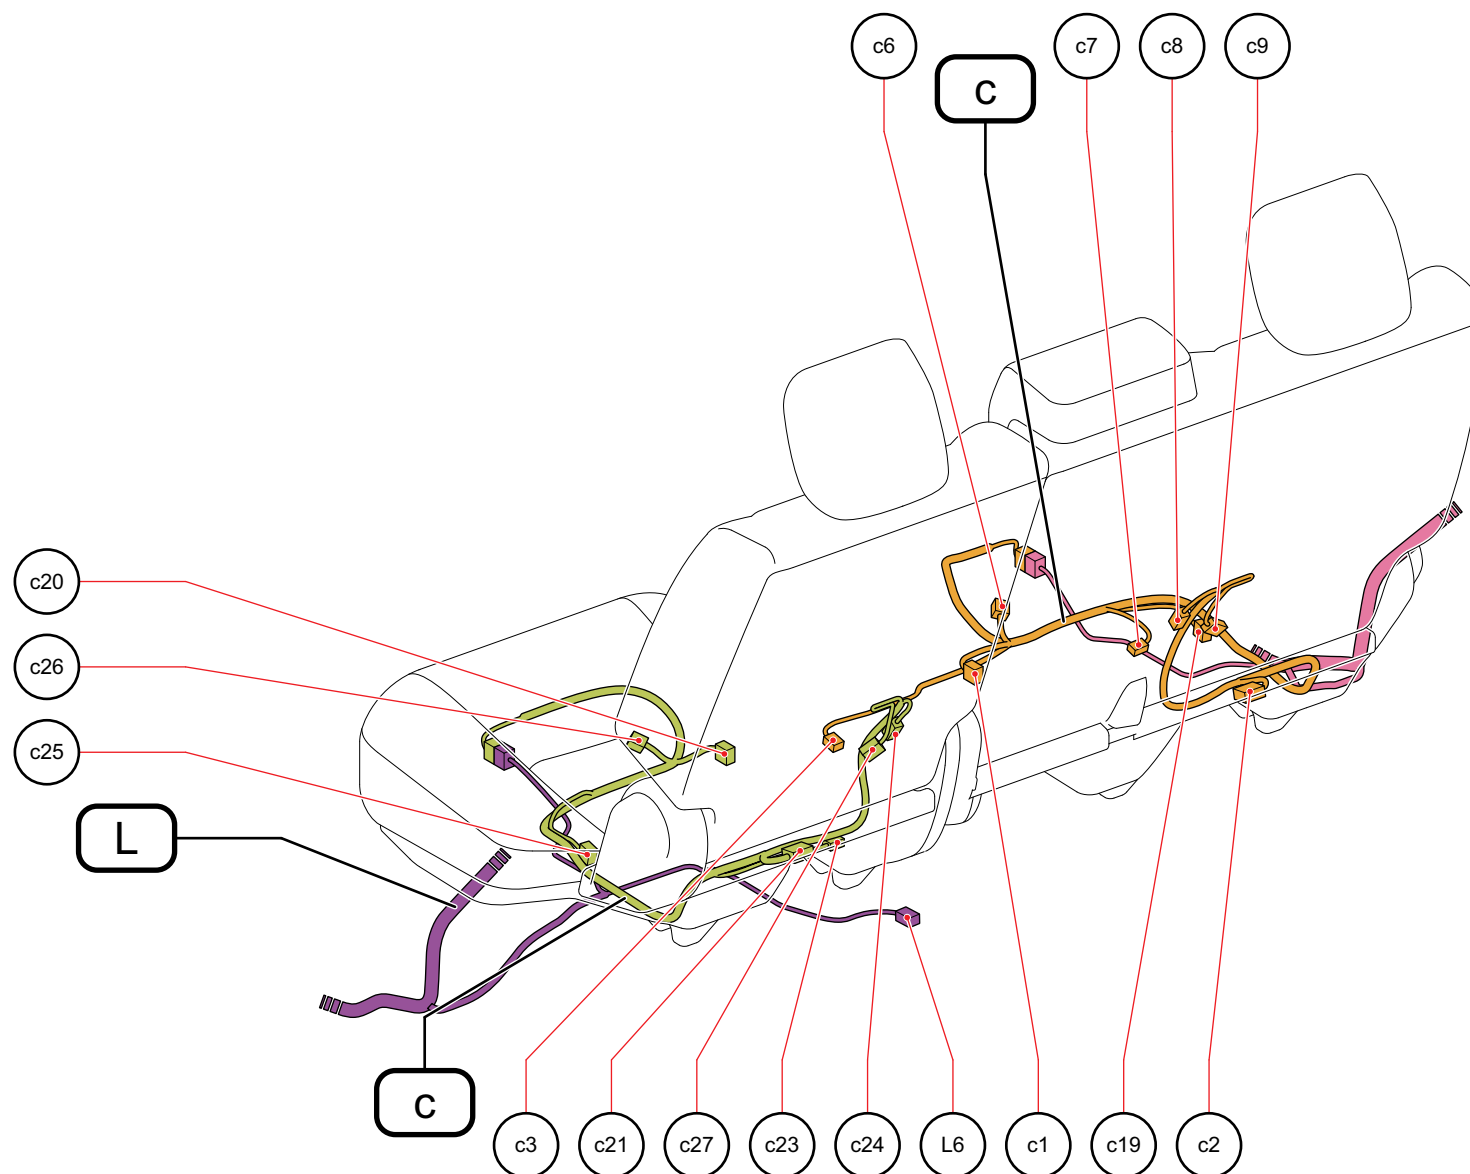

**Position of Parts in Seat (Rear No.1 Seat(60/40 Split Seat))**

---

- L 6 Rear Floor Side Airbag Sensor
- c 1 Seat Heater Control Sub-Assembly RH
- c 2 Rear No. 1 Seat Cushion Heater Assembly RH
- c 3 Rear Center Seat Lap Type Belt Assembly
- c 6 Rear Seat Cushion Climate Control Blower RH
- c 7 Rear No. 1 Seat Inner Belt Assembly RH
- c 8 Rear No. 1 Seat Back Heater Assembly RH
- c 9 No. 1 Seat Back Climate Control Blower RH
- c 19 No. 57 Junction Connector
- c 20 Seat Heater Control Sub-Assembly LH
- c 21 Rear No. 1 Seat Cushion Heater Assembly LH
- c 23 Rear No. 1 Seat Inner Belt Assembly LH
- c 24 Rear No. 1 Seat Back Heater Assembly LH
- c 25 No. 58 Junction Connector
- c 26 Rear Seat Cushion Climate Control Blower LH
- c 27 No. 1 Seat Back Climate Control Blower LH

Position of Parts in Seat (Rear No.1 Seat(60/40 Split Seat))

