

**Part Number: 64009-60010**

**Kit Contents**

Item #	Quantity Req.	Description
1	1	Tonneau Cover
2	2	Cap
3		

**Hardware Bag Contents**

Item #	Quantity Req.	Description
1		
2		
3		

**Additional Items Required For Installation**

Item #	Quantity Req.	Description
1		
2		
3		

**Conflicts**

None
------

**Recommended Tools**

<b>Personal &amp; Vehicle Protection</b>	<b>Notes</b>
Vehicle Protection	Blanket
Safety Gloves	
Safety Glasses	
<b>Special Tools</b>	<b>Notes</b>
<b>Installation Tools</b>	<b>Notes</b>
Nylon pry tool	Flat
Masking Tape	For vehicle protection
<b>Special Chemicals</b>	<b>Notes</b>

**General Applicability**

MY24 and newer Land Cruiser HV models (All trims)
---

**Recommended Sequence of Application**

Item #	Accessory
1	
2	
3	

\*Mandatory

**Vehicle Service Parts** (may be required for reassembly)

Item #	Quantity Req.	Description
1		
2		
3		

**Legend**

**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.

**OPERATOR SAFETY:** Use caution to avoid risk of injury.


**CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

**TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

**REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

**SAFETY TORQUE:** This mark indicates that torque is related to safety.

**REGULATORY MARK:** This mark indicates the component is related to regulatory compliance

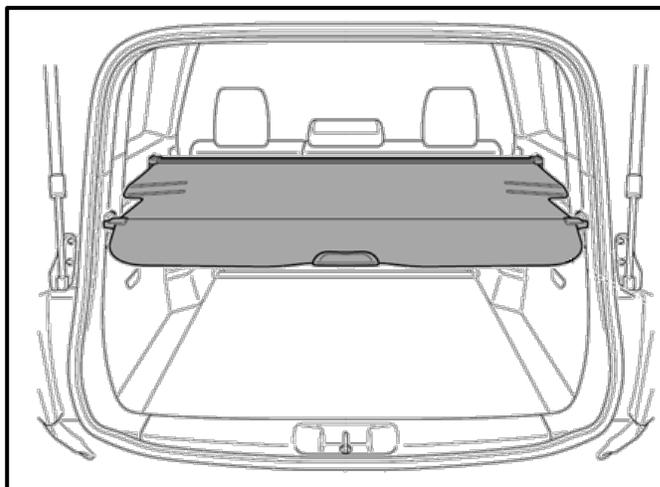


Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

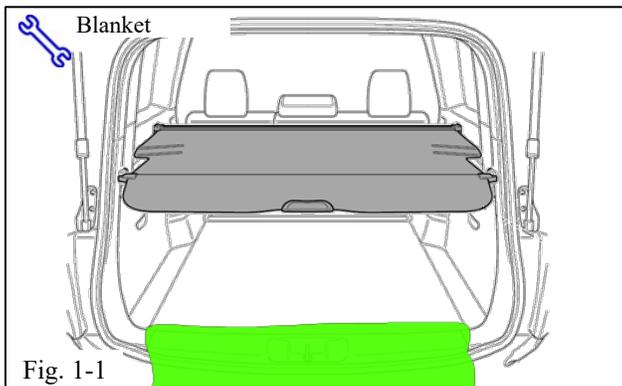

**1. Prepare the Vehicle**

 (a) Protect the rear bumper with a protective blanket/fabric for installation of the cargo cover (Fig. 1-1).

(b) Fold Down Rear Seats.


**2. Deck Side Cap Removal**

(a) Place masking tape along the deck side cap/trim edge.

 (b) Using a Nylon Pry tool, pry along the edge and remove the RH deck side cap from RH deck side trim (Fig. 2-1).

(c) Repeat steps 2 (a) and 2(b) for the LH side.


(d) Remove masking tape.

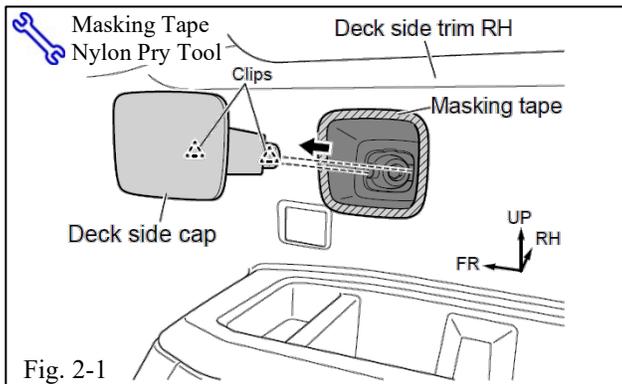


**3. Cap Installation**

(a) Fit the cap into the bolt fastening hole on RH desk side trim (Fig 3-1).

(b) Repeat step 3(a) for the LH side.

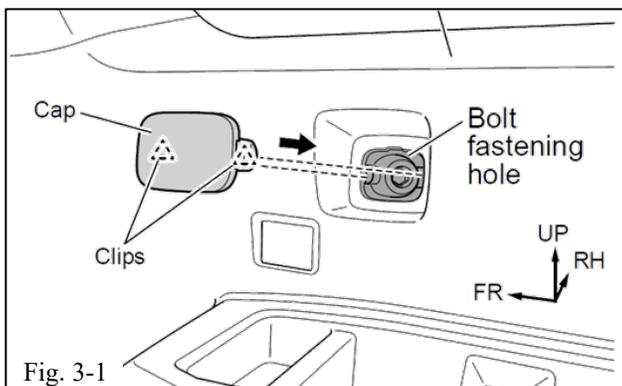


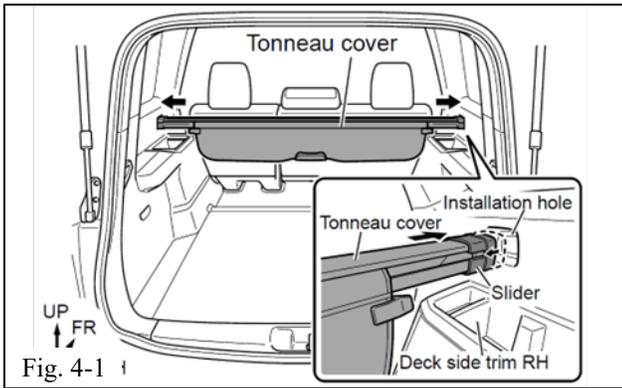

#### 4. Tonneau Cover Installation

- (a) Compress the slider on one side of the tonneau cover and insert it into the RH deck side trim (Fig. 4-1).
- (b) Repeat step 4(a) for the LH side.

**⚠ Note: Ensure that the tonneau cover is firmly secured**

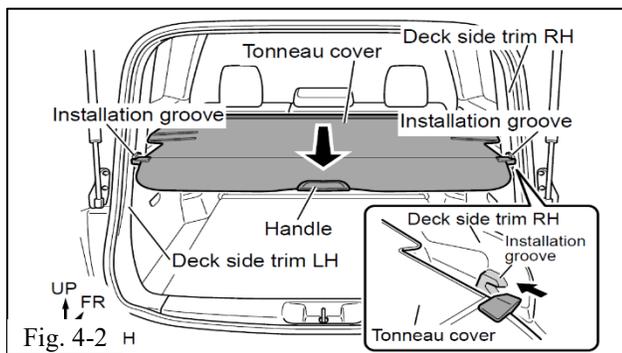

- (d) Pull the tonneau cover handle and fit both ends into the RH/LH deck side trim installation grooves to secure (Fig. 4-2).

**⚠ Note: Ensure that the tonneau cover has been firmly secured in the installation grooves**

Checklist - these points **MUST** be checked to ensure a quality installation.

<u>Check:</u>	<u>Look For:</u>
<p><u>Accessory Function Checks</u></p> <ul style="list-style-type: none"><li><input type="checkbox"/> Verify parts:</li><li><input type="checkbox"/></li><li><input type="checkbox"/></li><li><input type="checkbox"/></li></ul>	<p>Removed items have been discarded &amp; replaced items are in place</p>
<p><u>Vehicle Function Checks</u></p> <ul style="list-style-type: none"><li><input type="checkbox"/> Open and close the trunk</li><li><input type="checkbox"/></li></ul>	<p>No interference between the trunk with the Tonneau Cover</p>
<p><u>Vehicle Appearance Check</u></p> <ul style="list-style-type: none"><li><input type="checkbox"/> After accessory installation and removal of protective cover(s), perform a visual inspection.</li></ul>	<p>Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMNA Accessory Quality Shipping Standard.)</p>