


Wind Deflectors - Full Kit INSTALLATION INSTRUCTIONS GX

Model year As from 2023/12
Vehicle code VJA252L-GNUZZX
Part number PW162-60013

**Latest Version
SCAN HERE**



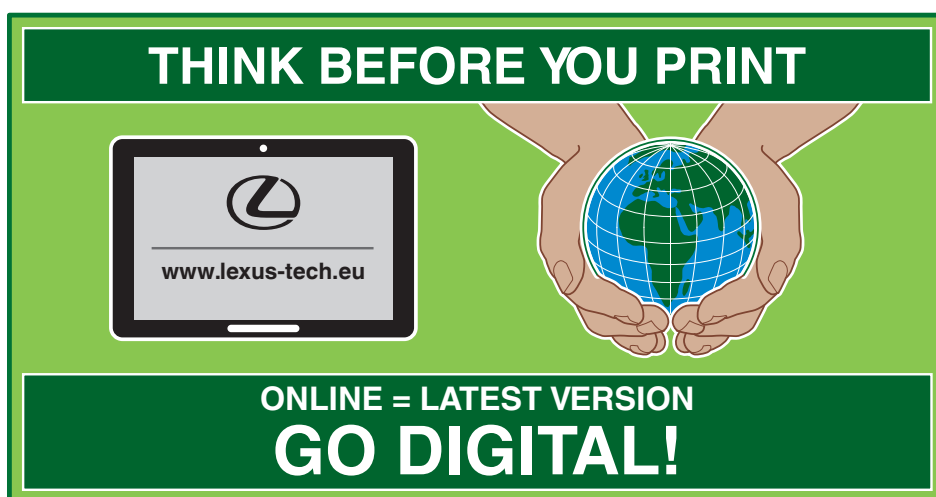

Revision Record


Rev. No.	Date	Page	Step	Remarks

KIT CONTENT

PW162-60013



A

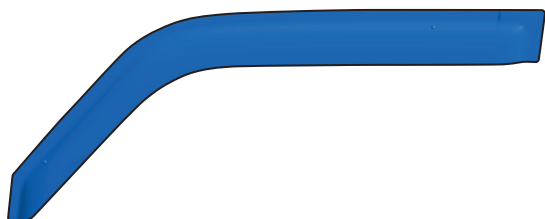


1x

B



1x

C

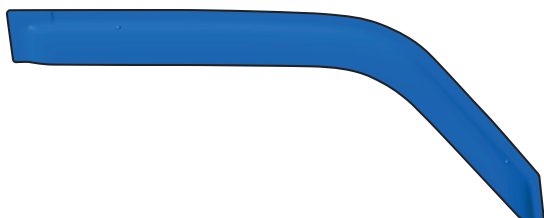


1x

D





1x

E

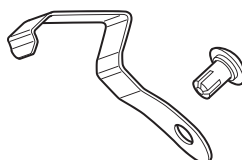


8x

TOOLS

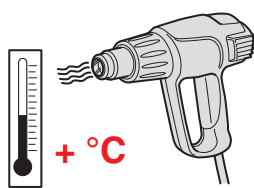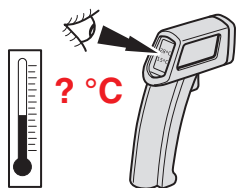

CONSUMABLES

CLEANER / DEGREASER SPRAY

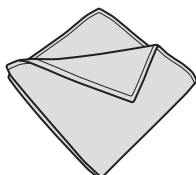

PERSONAL PROTECTION EQUIPMENT



USEFUL GENERAL MANUALS


SYMBOLS

Latest Version
SCAN HERE




CLEANER / DEGREASER

Latest Version
SCAN HERE

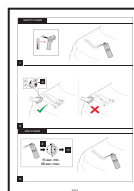

OVERVIEW

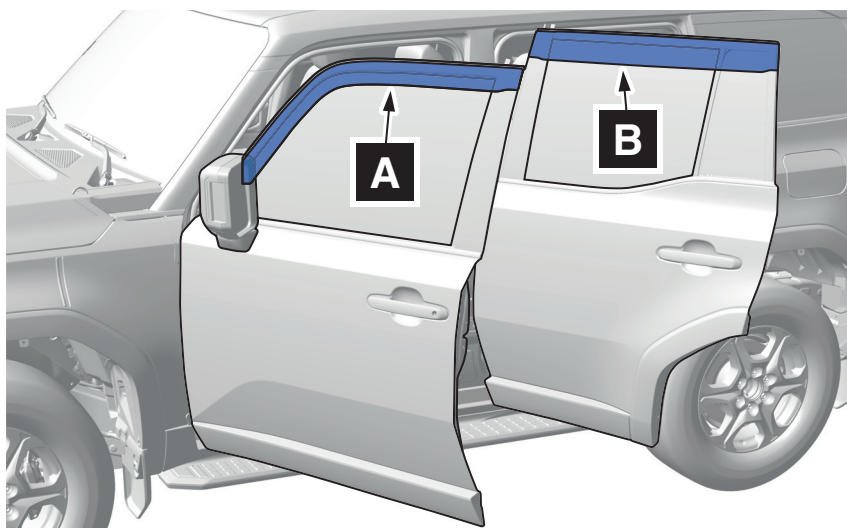

GENERAL







Material Safety Data Sheet




Technical Data Sheet

GENERAL

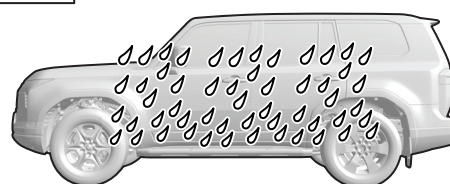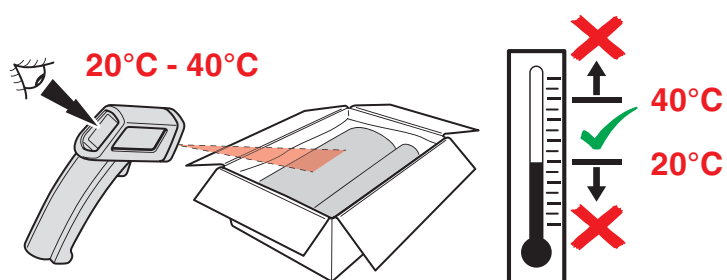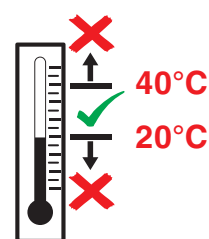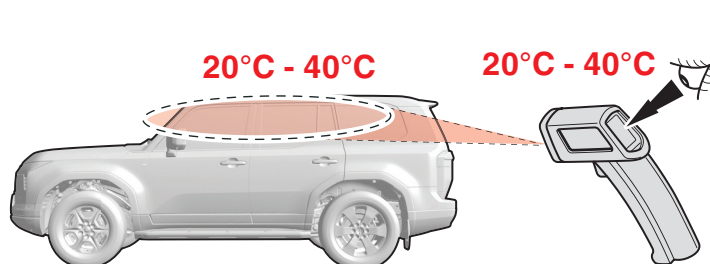


INSTALLATION INSTRUCTIONS


1

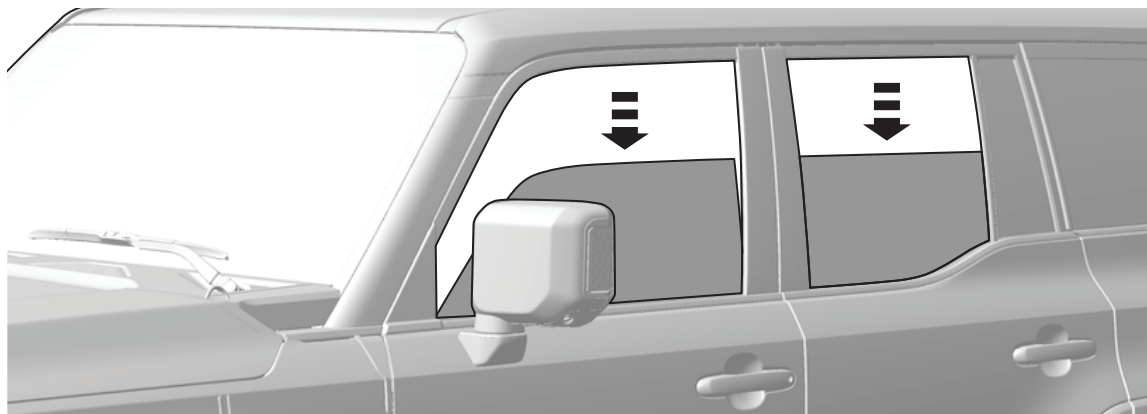


2

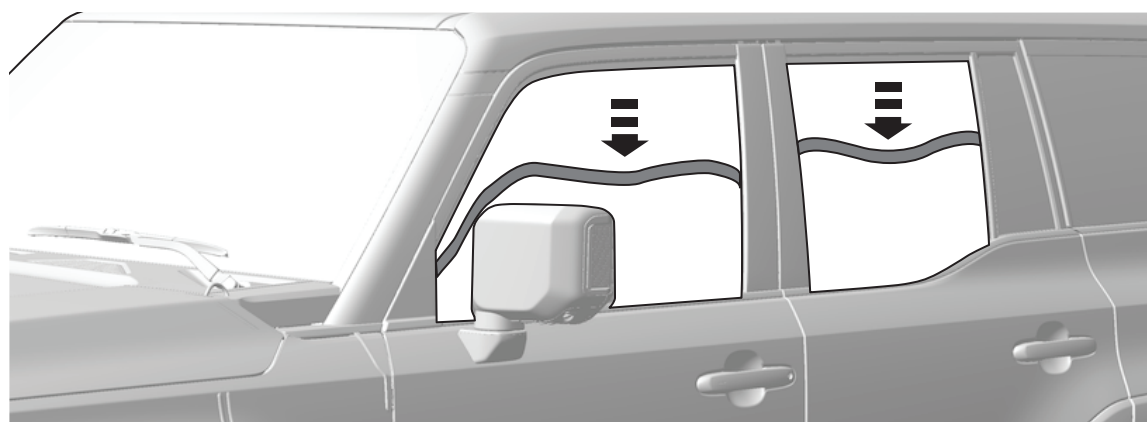


3

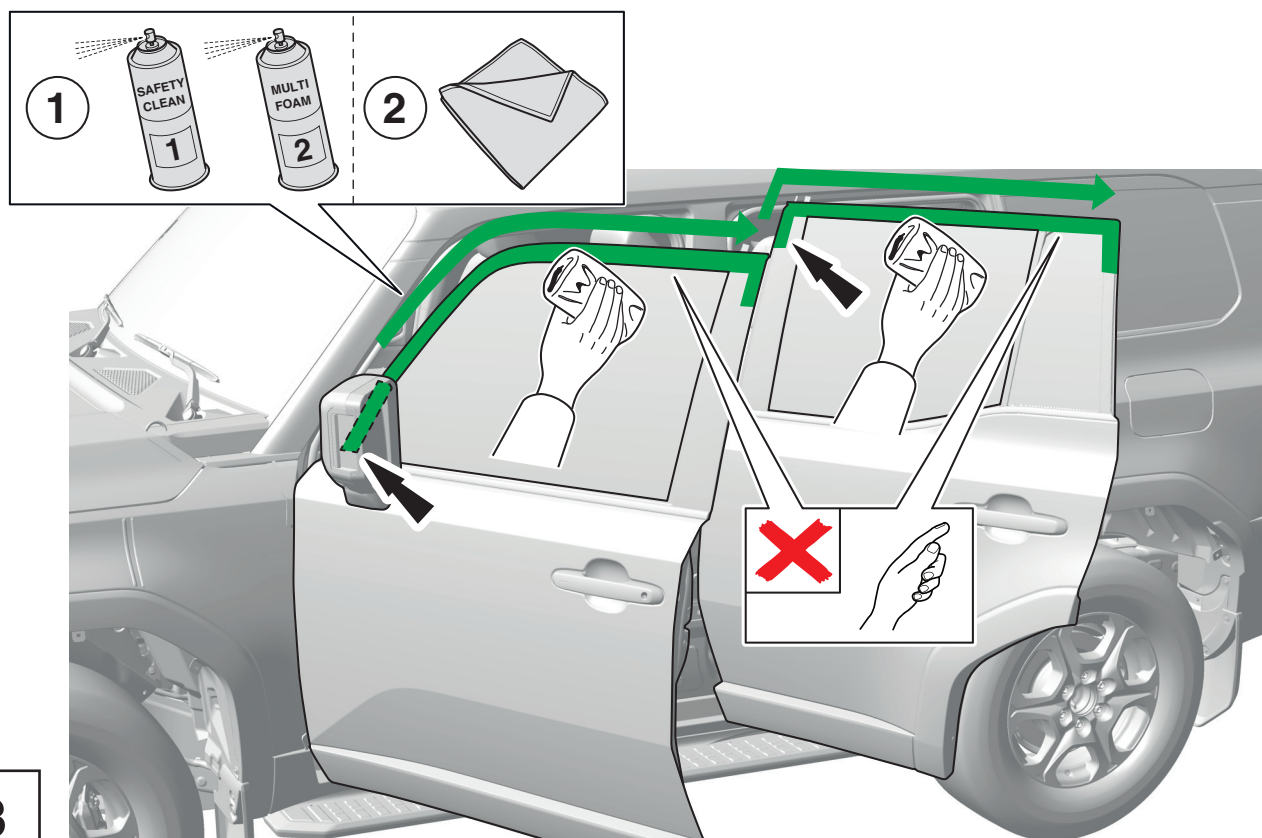





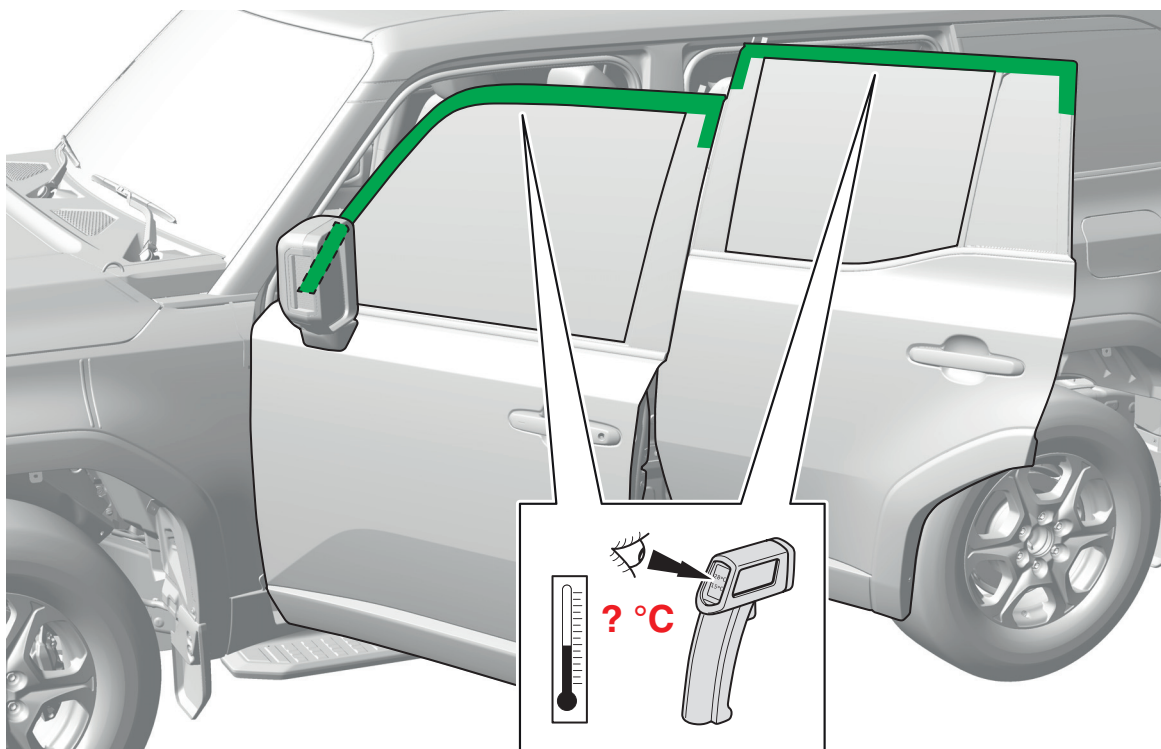


4




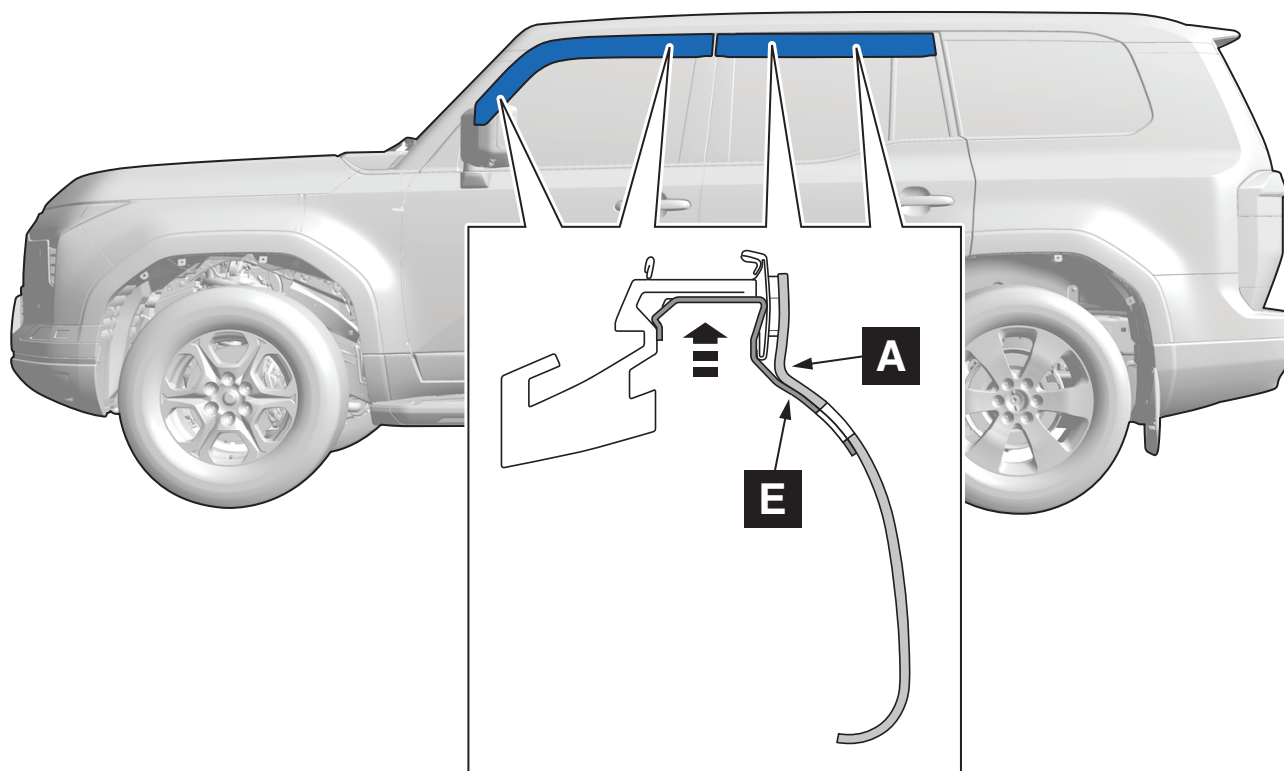


5


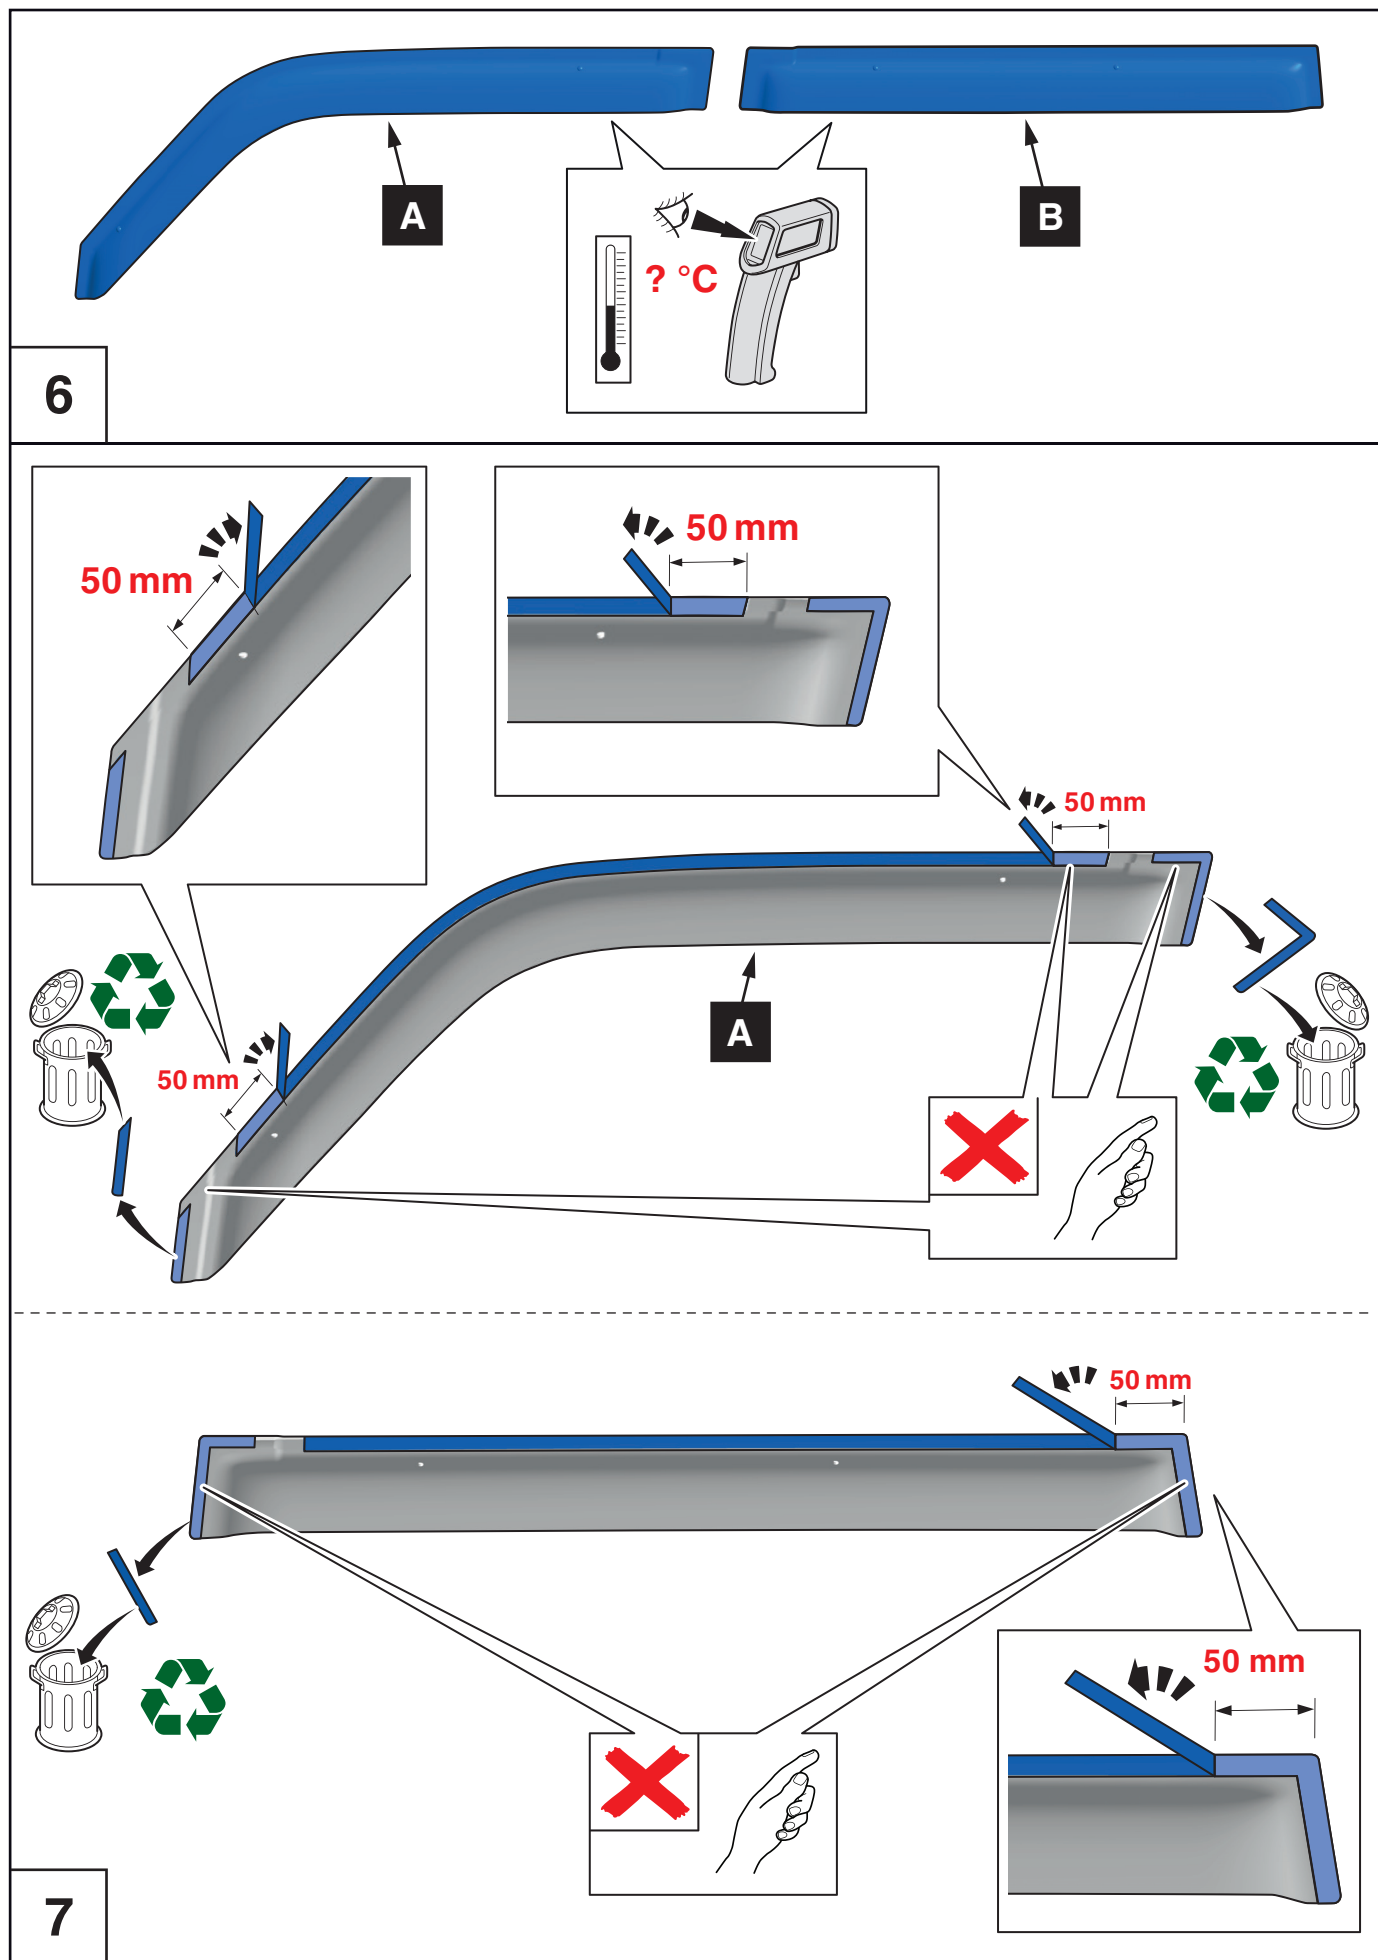


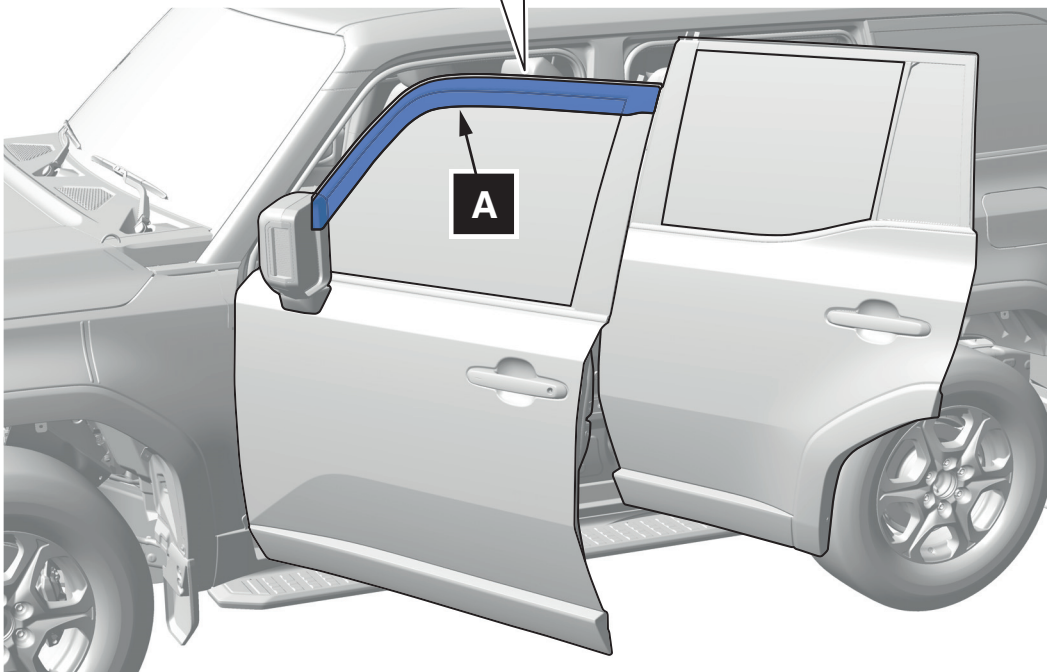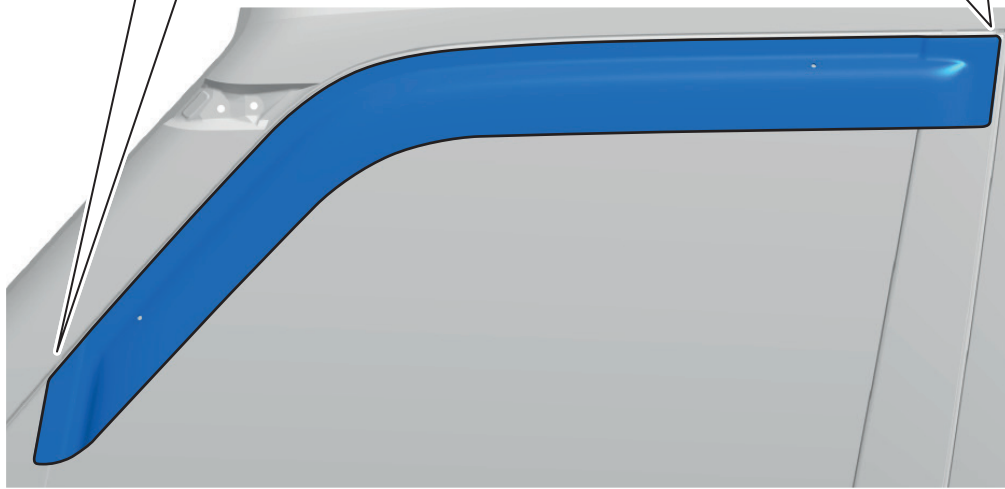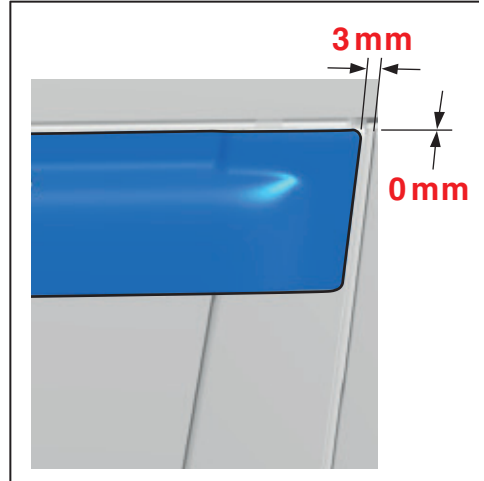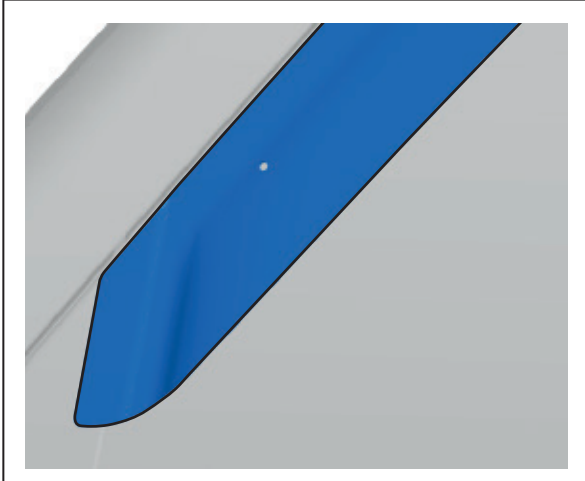




8

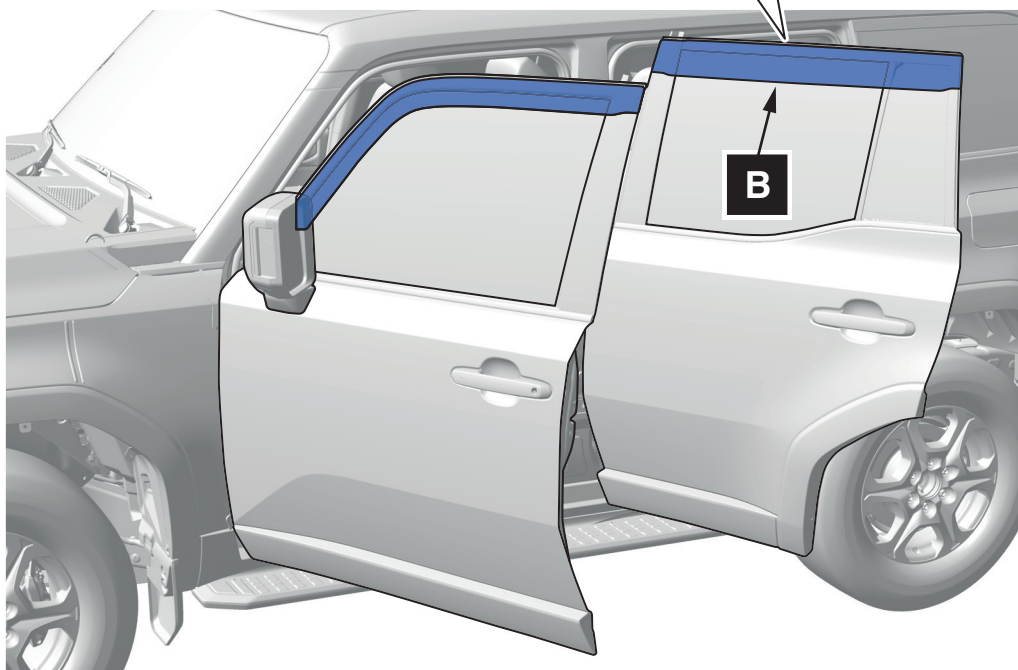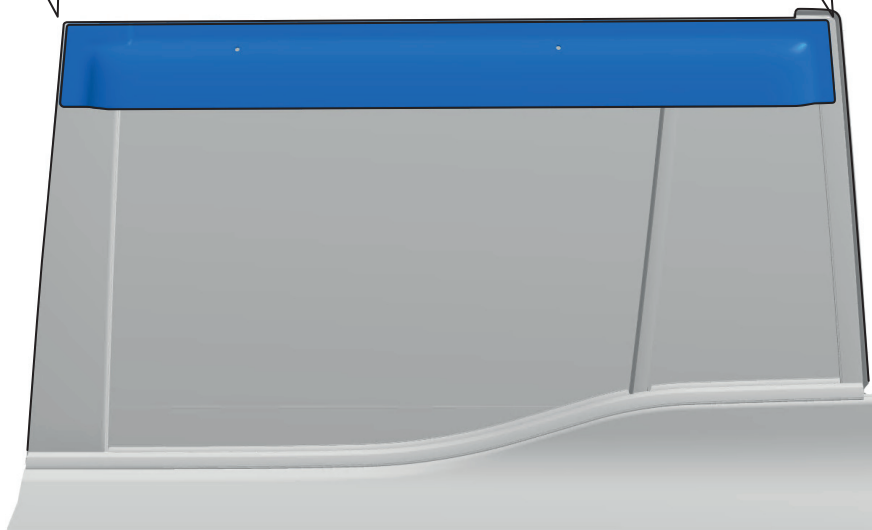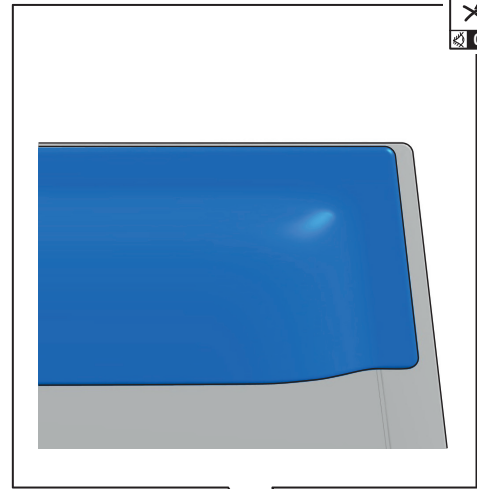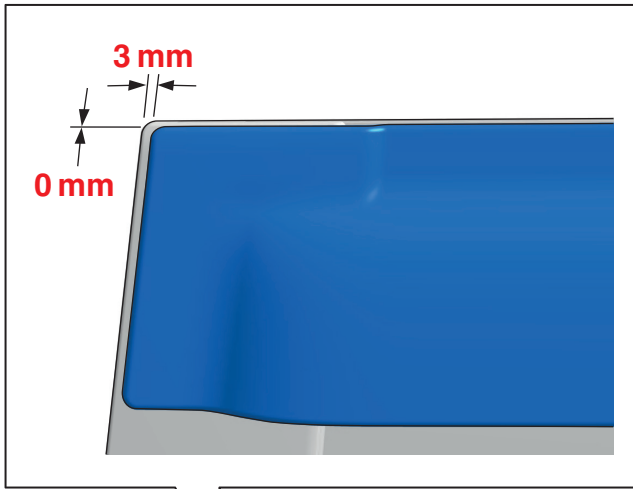


9

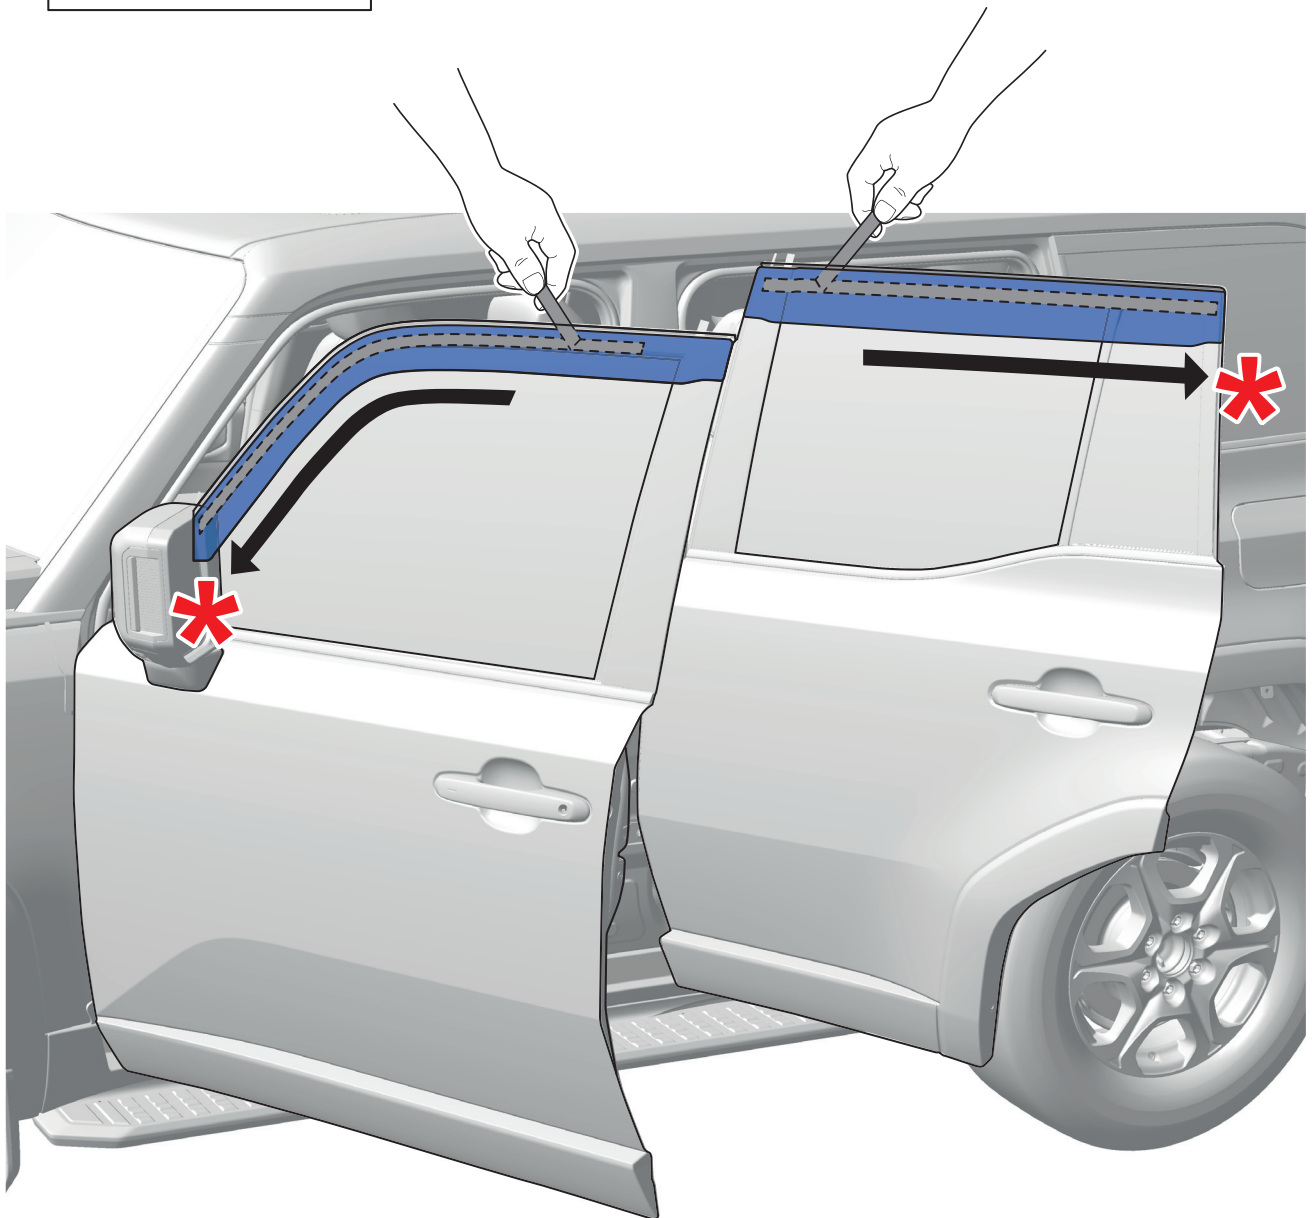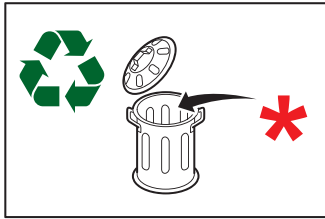


10

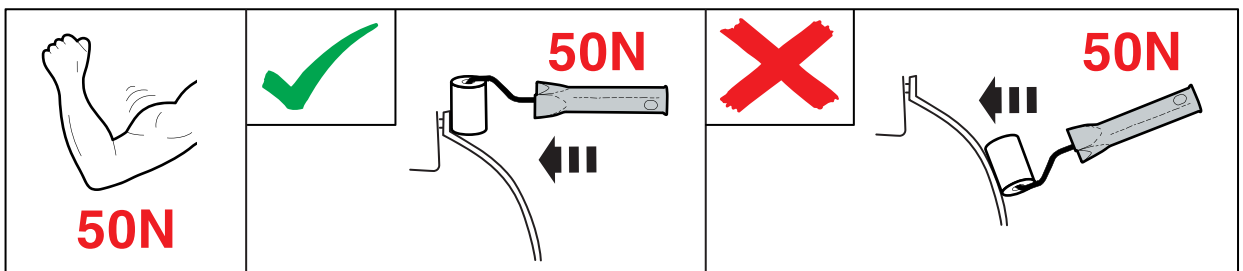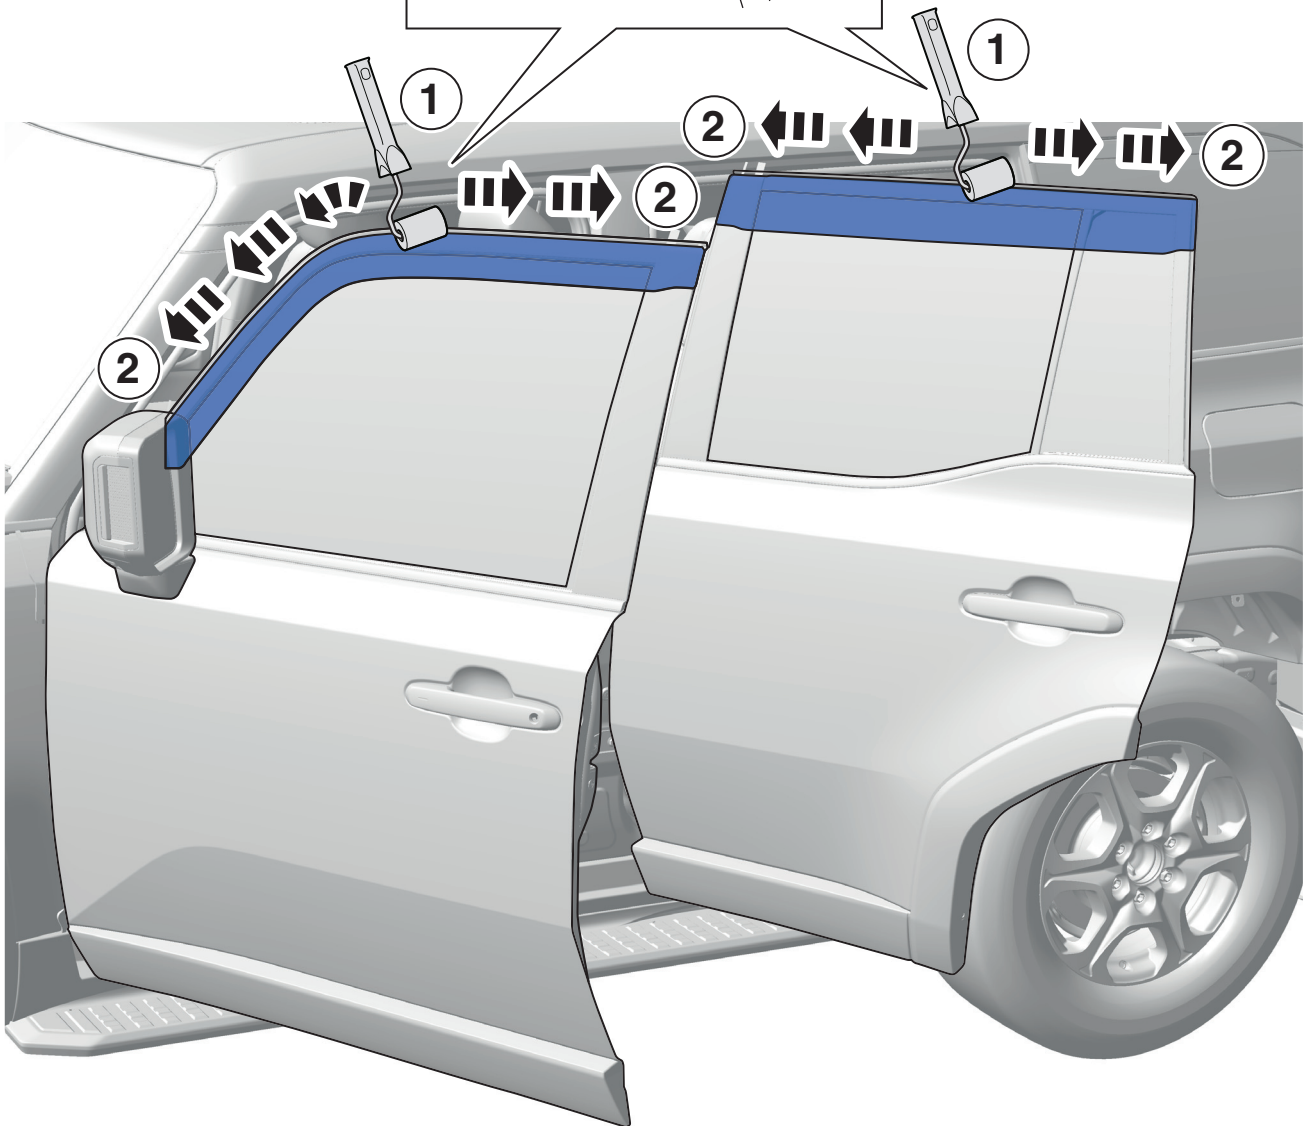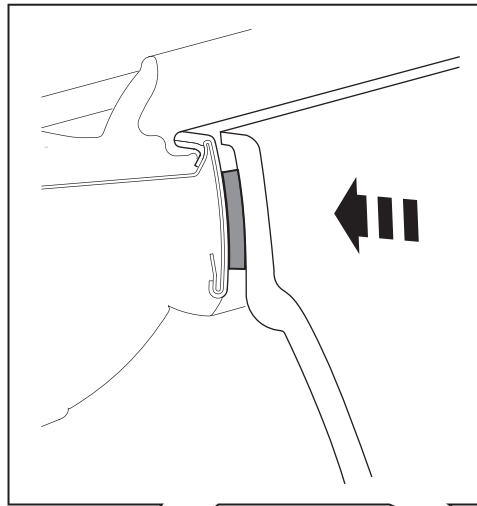



11

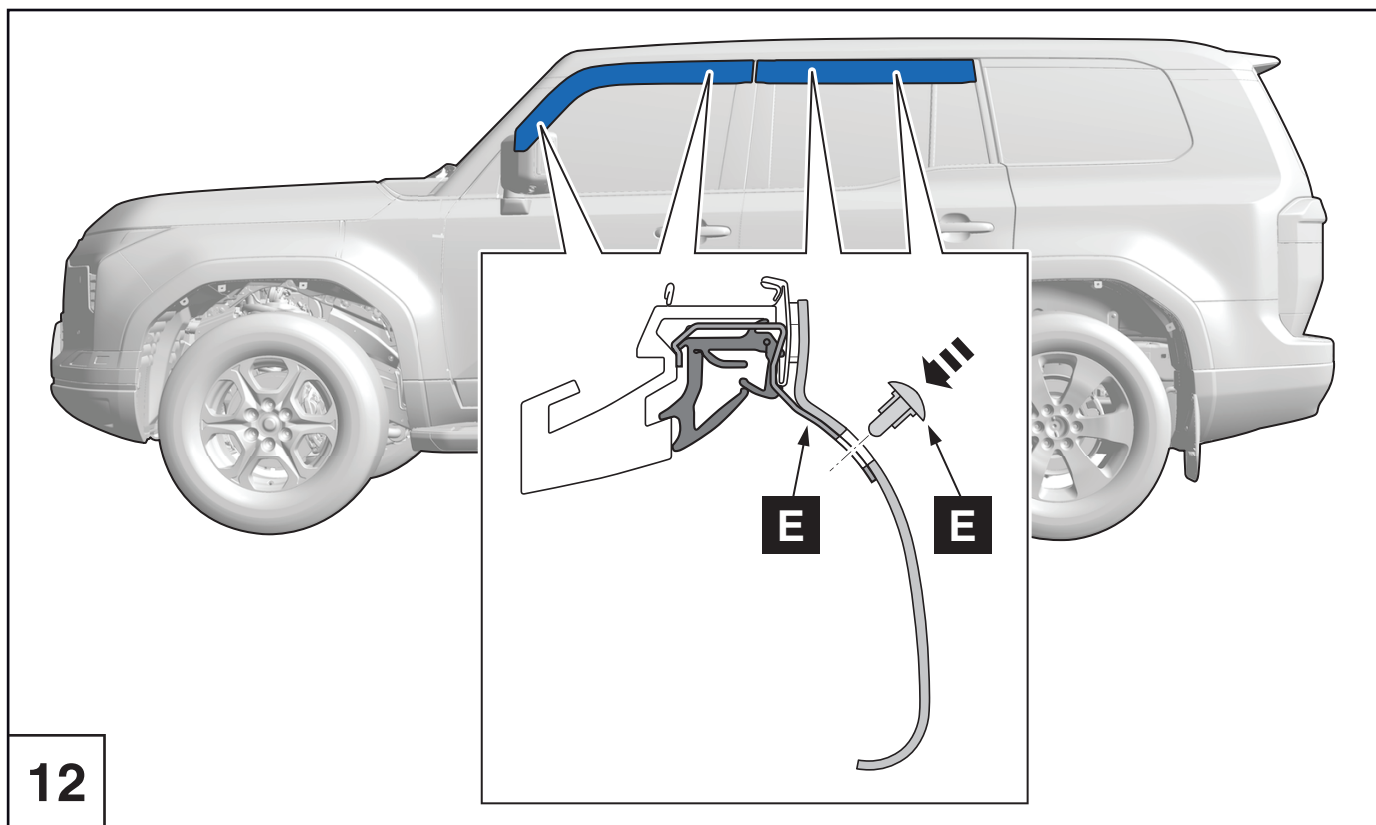

12




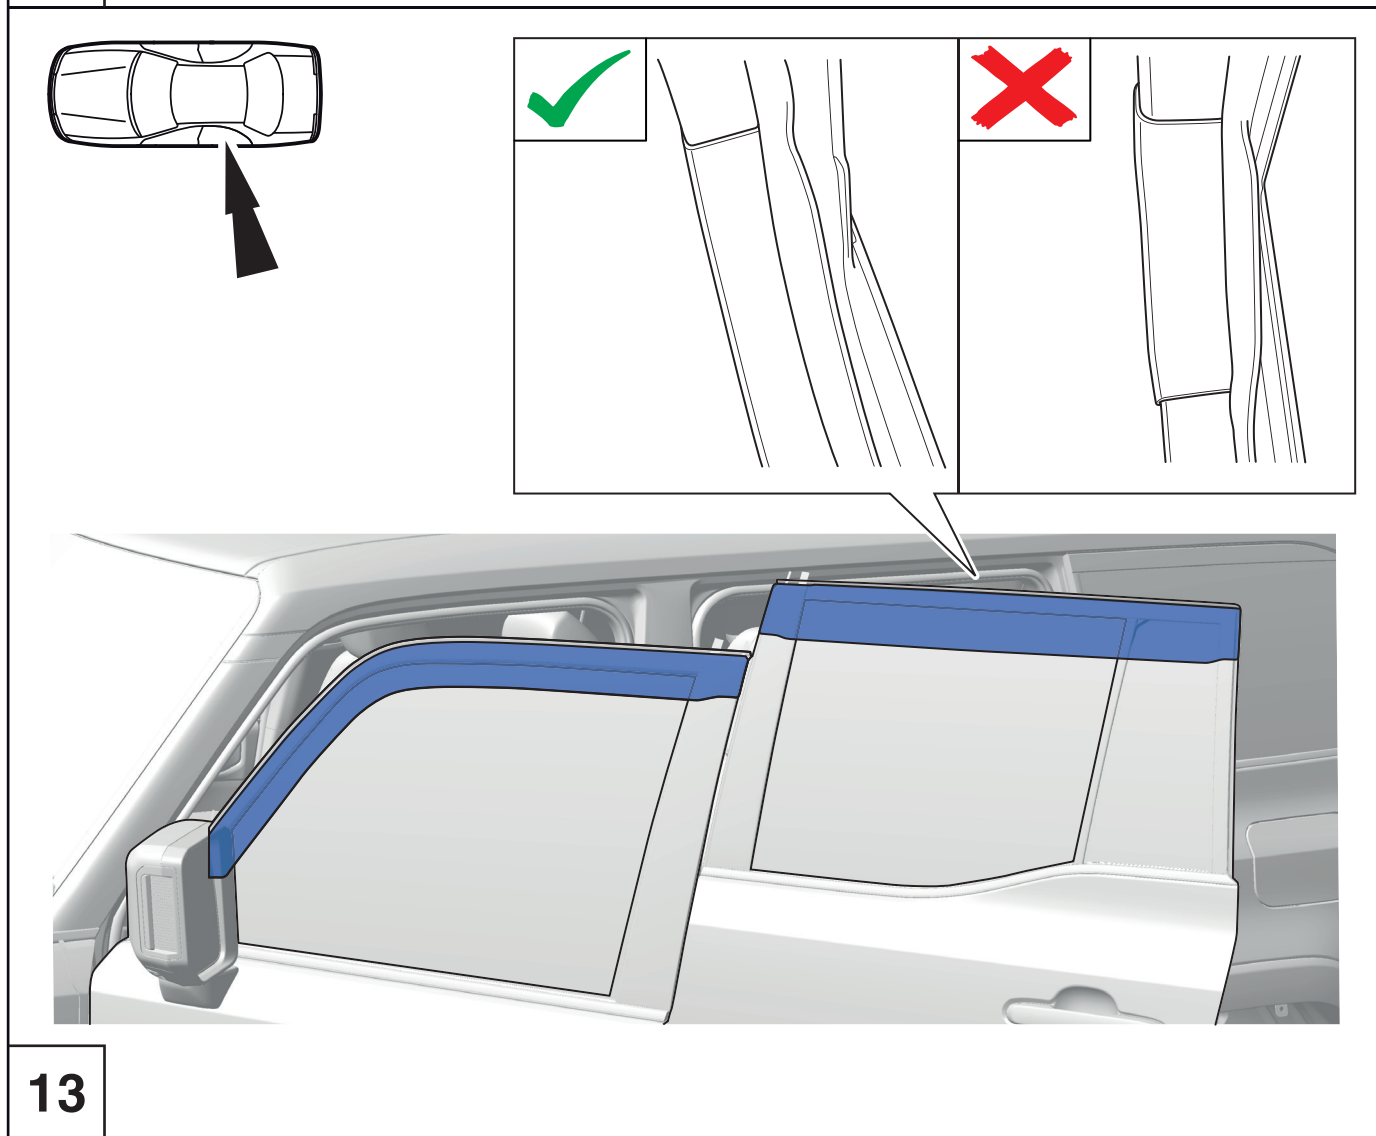


13

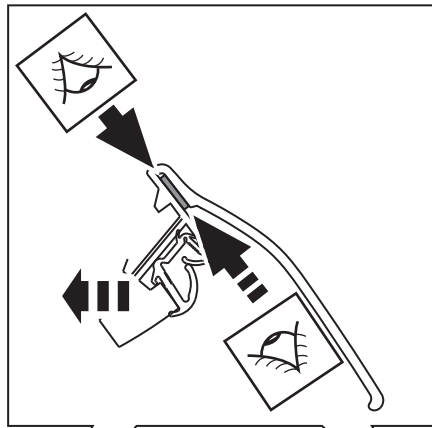
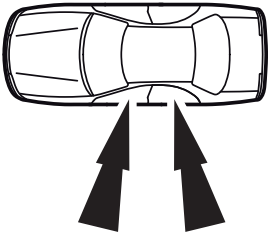


14





RHS = LHS

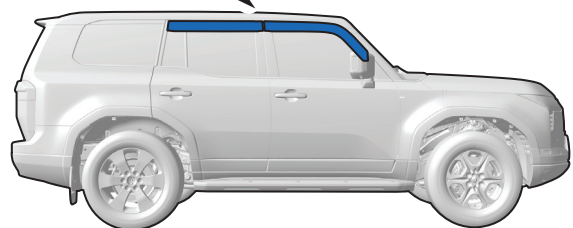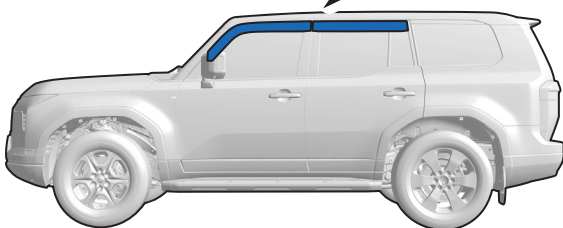

15

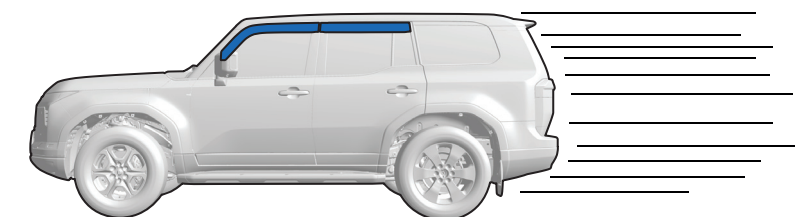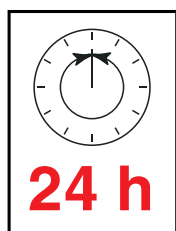

Max. 90 Km/h

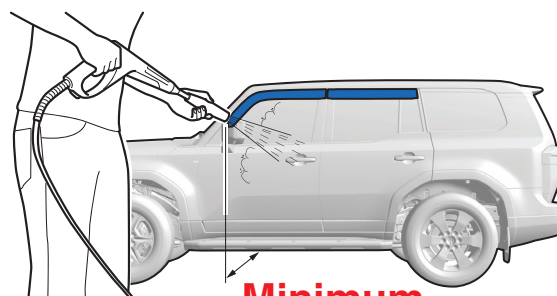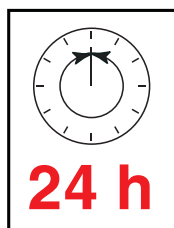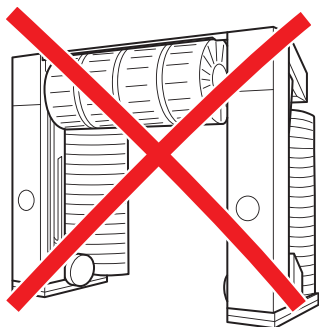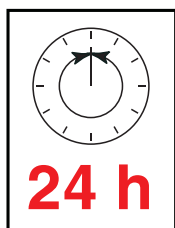

**Minimum
50cm.**

CHECK SHEET 1 of 2

Model / Year


GX As from 2023/12

Wind Deflectors - Full Kit

VIN n°


DURING INSTALLATION

1




☐

2

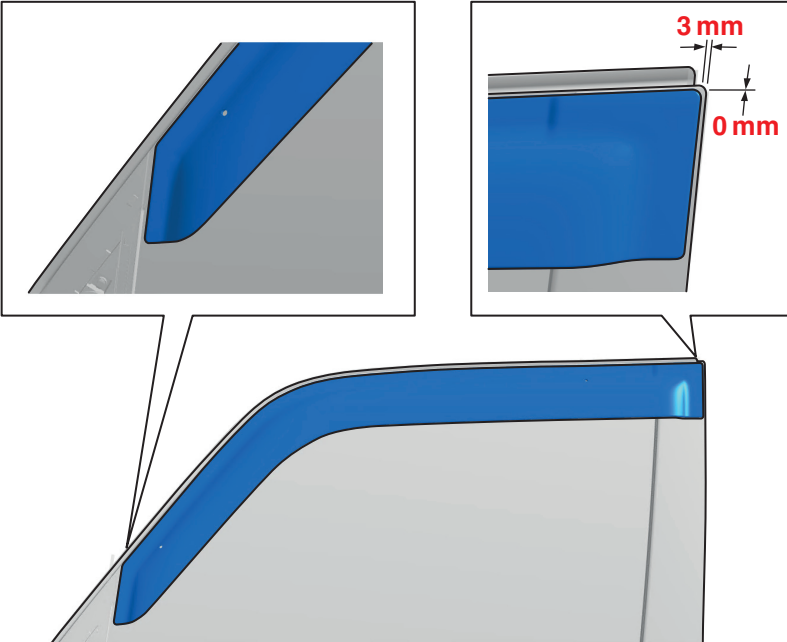

LHS ☐ RHS ☐


3

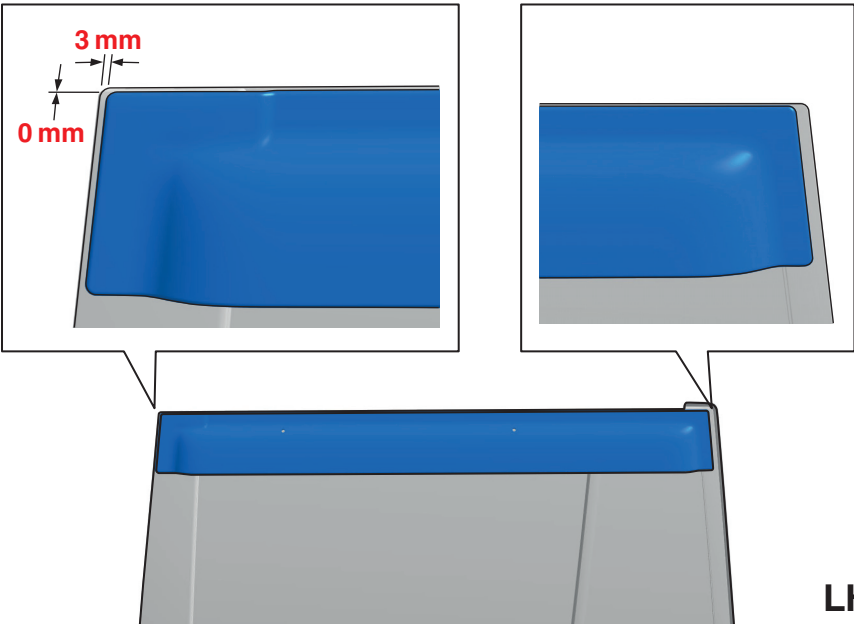


LHS ☐ RHS ☐



CHECK SHEET 2 of 2



AFTER INSTALLATION

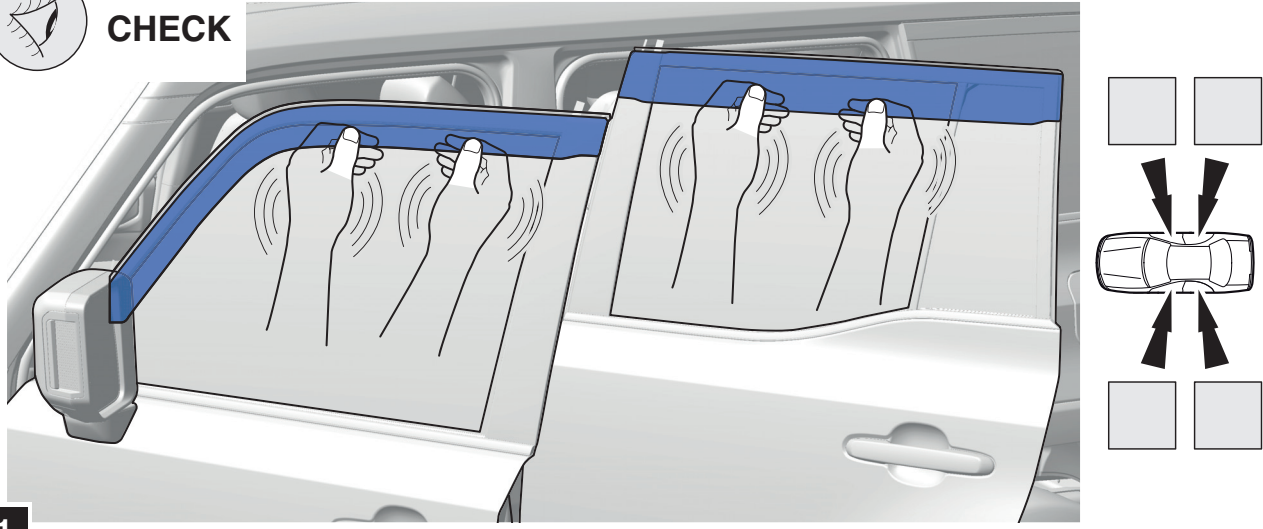 **CHECK**






1

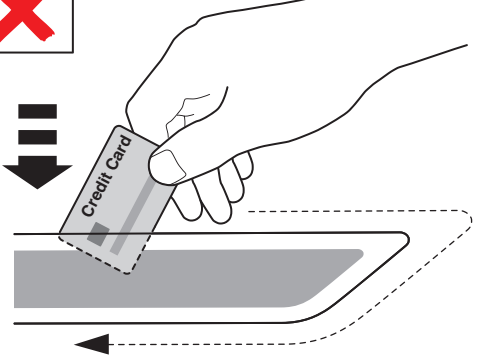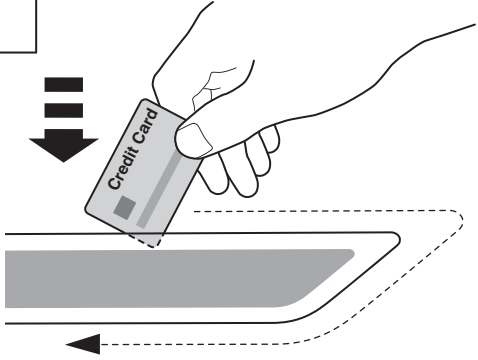

2

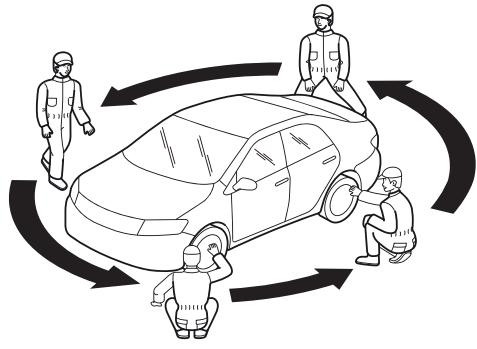

 
= OK

3

Installation Date:
... / ... / ...

Technician Name & Signature:

Stamp: